



USER'S GUIDE

Descartes SmartFleet™

August 2019

© 2019 The Descartes Systems Group Inc. All rights reserved.

Information in this document is subject to change without notice. Descartes makes no warranties, express or implied, in respect of this document or its contents.

Complying with all applicable copyright laws is the responsibility of the user. Without limiting the rights under copyright, no part of this document may be reproduced, stored in or introduced into a retrieval system, or transmitted in any form or by any means (electronic, mechanical, photocopying, recording, or otherwise), or for any purpose, without the express written permission of The Descartes Systems Group Inc. ("Descartes").

Descartes may have patents, patent applications, trademarks, copyrights, or other intellectual property rights covering subject matter in this document. Except as expressly provided in any written license agreement from Descartes, the furnishing of this document does not give you any license to these patents, trademarks, copyrights, or other intellectual property.

Descartes SmartFleet, Descartes FleetCenter, Descartes Global Logistics Network (GLN), Descartes, the phrase "Helping Customers Deliver," and the Descartes logo are either registered trademarks or trademarks of Descartes and/or its affiliates.

The names of actual companies and products mentioned herein may be the trademarks of their respective owners.

The Descartes Systems Group Inc.

120 Randall Drive

Waterloo, Ontario Canada, N2V 1C6

Phone: 519-746-8110

Internet: <http://www.descartes.com>

Customer Support

In North America: 1-877-786-9339

Outside North America: +800 -7866-3390

e-mail: servicedesk@descartes.com

Table of Contents

Introduction	4
Document Conventions.....	4
Welcome to Descartes Telematics SmartFleet™	5
Audience	5
Starting Your Day	6
Login (Tablet Device)	6
Login (Smart Device)	8
On the Road	14
Descartes SmartFleet Main Menu	14
Work Status.....	15
Automatic Status Changes	18
Trailer and Shipping Document Assignment	18
HOS (Hours of Service)	23
HOS Status	23
HOS Chart	26
Reviewing and Certifying HOS Logs.....	28
Creating a New HOS Log	31
Reviewing and Certifying Proposed HOS Logs	36
Reporting Exceptions.....	40
Viewing Violations	44
Personal Conveyance	45
Yard Moving	48
Warnings.....	49
Co-Drivers	51
Login.....	51
Work Status.....	55
HOS	56
Swap Drivers	56
Unidentified Driver	59
HOS Review.....	62
Transfer of ELD Records.....	67
ELD Diagnostic.....	68
ELD Malfunction	70
Log-Out.....	71

Introduction


Descartes Telematics is an Federal Motor Carrier Safety Administration (FMCSA) ELD Compliant solution for Hours of Service (HOS) and automatic recording of ELD Diagnostics and Malfunctions.


Document Conventions

This document uses the following conventions:

- Names of windows, frames, dialogs, menus, list boxes, and lists begin with uppercase and are bolded. (Tools menu, Save button)
- Key combinations that you press appear in mixed case. If the keys are joined by a plus sign (+), press and hold the first key simultaneously with the remaining keys (for example, CTRL+ALT+DEL).
- Text that you type appears in `Courier New` font. (Enter `USERID` in the login field.)
- Cross-references to other documents, or to sections within the current document, appear in underlined italics. (See *Saving a File* for details.)
 - *Italics* are used for emphasis throughout this document.

 **Note**— Information important to a particular task or function is introduced with the note format and icon.

 **Tip**— Information that may make completing a task easier, but isn't essential to the task, is introduced with the tip format and icon.

 **Warning**— **This warning format indicates information that you need to pay particular attention to. Ignoring information presented as a warning could lead to damage and unexpected results. Disregarding information presented as a warning may result in damage to your software or data.**

Welcome to Descartes Telematics SmartFleet™

The Descartes Telematics SmartFleet application allows drivers to manage and comply HOS rules and exchange information between the driver's vehicle and the back-office system. This information includes the following:

- Vehicle GPS position
- HOS Logs with location and timestamp
- Vehicle performance information:
 - Speed
 - RPM
 - Idling
- Arrival and departure to/from locations and vehicle stops
- Two-way messages
- Input form entries

Additionally, Descartes SmartFleet provides the following features:

- Communication to/from driver and carrier
- Engine monitoring
- Automated fuel tax reporting
- Navigation
- Input forms – electronic forms; e.g. fuel form, pre- and post-trip, etc.

Audience

The intended audience for this document is drivers using Descartes SmartFleet for their HOS and trainers preparing training material for drivers.

Starting Your Day


At the start of your day, turn on the ignition, which also boots up your device. The system takes up to one minute to boot, including the time to successfully establish the connection between the box (LMU/Go) and the screen.


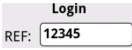


The system is ready for use when the User Interface displays.


Login (Tablet Device)

To login:

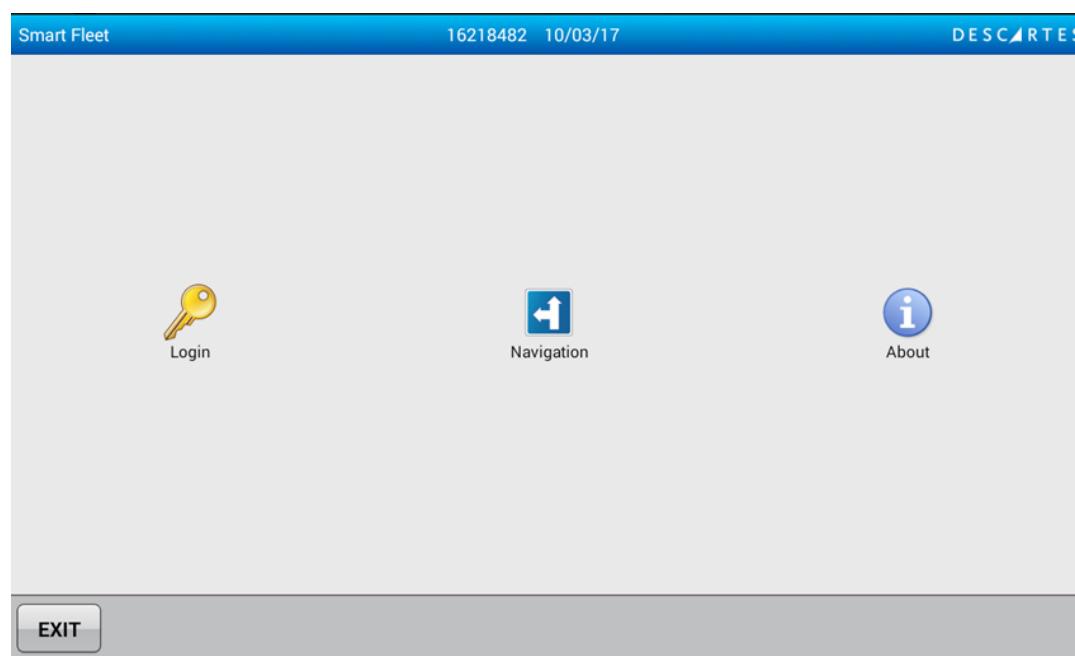
- 1 The **SmartFleet Entry** menu displays.



- 2 Tap the **Login** icon  on the **SmartFleet Entry** menu. The **Login** screen displays.
- 3 Enter your PIN number or reference (REF) number in the login field .
- 4 If configured for ELD Operations the driver can also enter the Shipping Document number on the Login screen .
- 5 Tap the **Login** button .

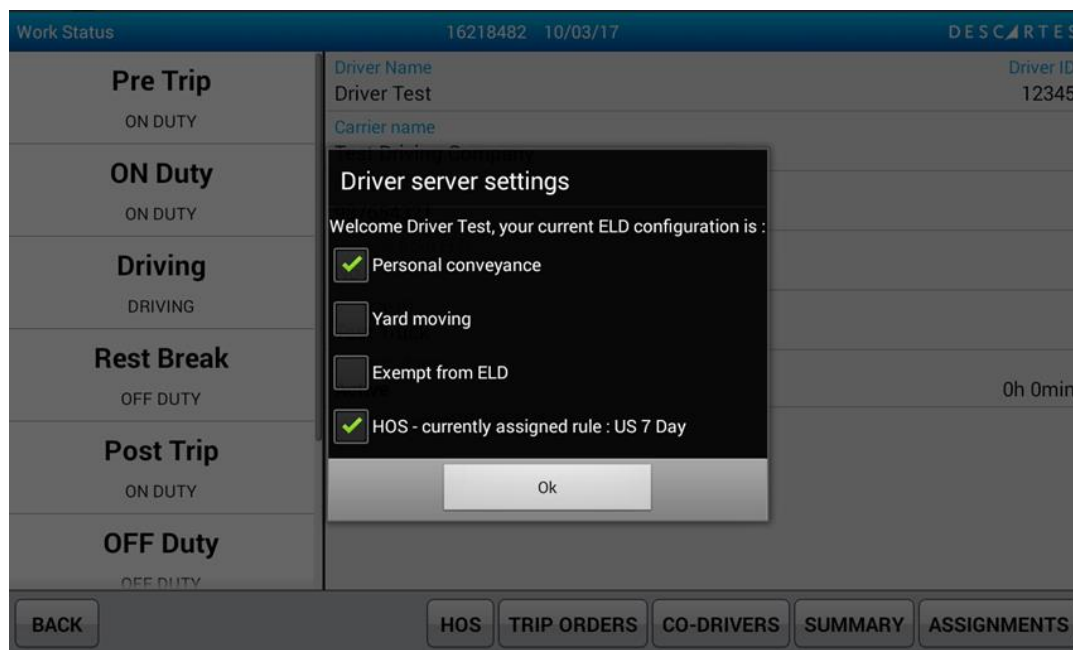

- 6 Review your settings and tap **OK** to dismiss the dialog. The **Work Status** screen is displayed.
- 7 If there are unidentified driver logs associated with this vehicle, the driver is informed.

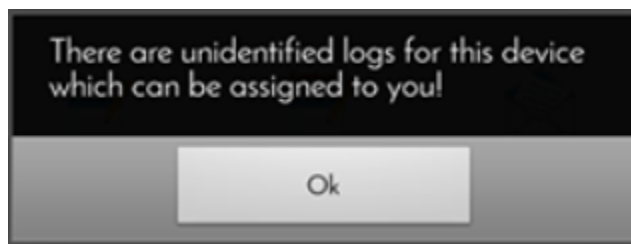


Unidentified Driver Logs can be viewed and claimed by the driver by selecting the Unidentified Driver Logs icon on the Main Menu. See section 'Unidentified Driver' for further details.


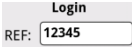


- ➡ **Note**— If the tablet device does not establish connection to the Go device, or at any point is disconnected by the driver then the top line color (title bar) is Red to indicate to the driver that he is disconnected, and he must place the device back in the docking station or check the cables to reconnect.


Login (Smart Device)

To login:

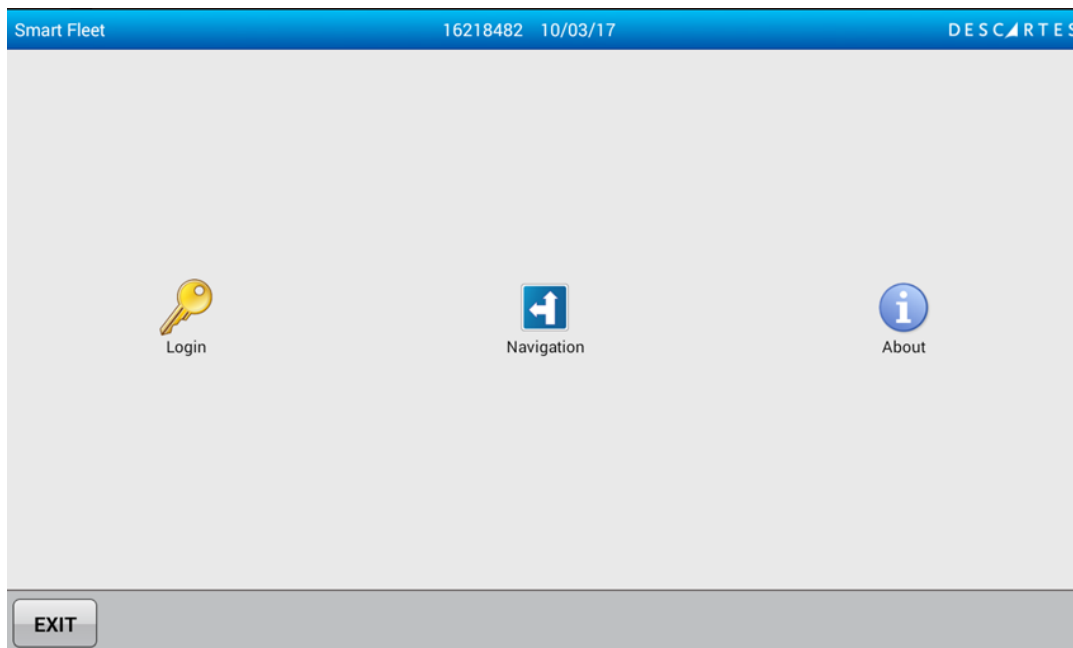- 1 Select the **Descartes SmartFleet** icon on the **Home** screen. The **SmartFleet Entry** menu displays.



- 2 Tap the **Login** icon  on the **SmartFleet Entry** menu. The **Login** screen displays.
- 3 Enter your PIN number or reference (REF) number in the login field .
- 4 If configured for ELD Operations the driver can also enter the Shipping Document number on the Login screen .
- 5 Tap the **Login** button .

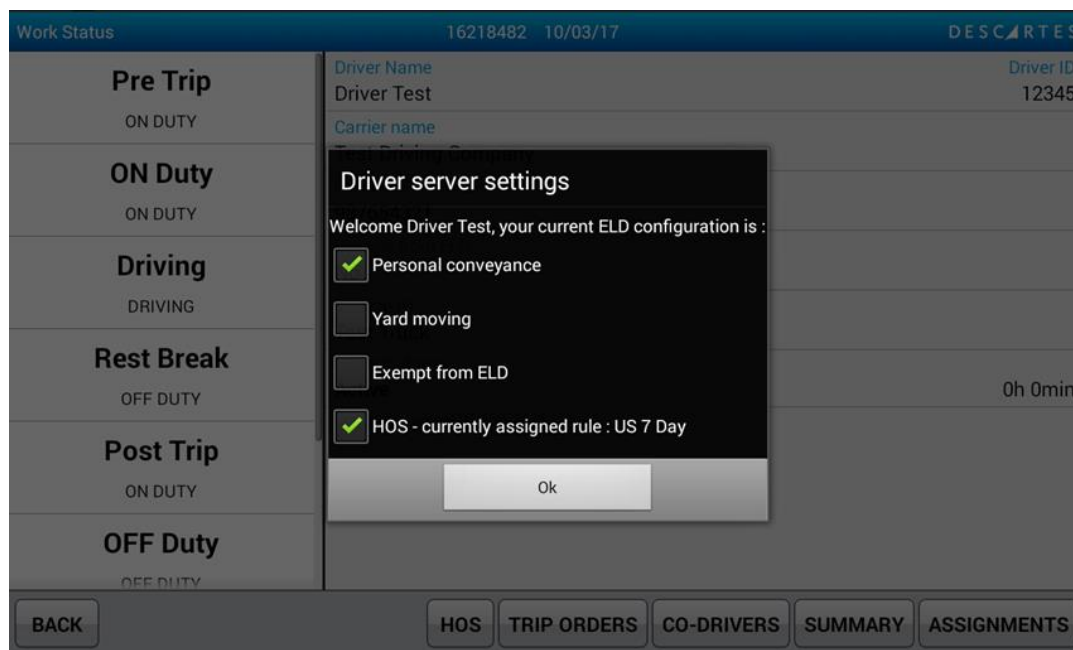

- 6 Review your settings and tap **OK** to dismiss the dialog. The **SmartFleet Main Menu** is displayed.
- 7 Depending on your configuration your Smart device may automatically connect to the device in your vehicle, or it may need to be manually tethered.


You will know if your Smart device has automatically connected to the device in your vehicle because when connection is established the top line will color green (i.e. SmartFleet title bar is colored green) and the details of the device in your truck will be displayed.




If your Smart device has not automatically tethered to the vehicle (i.e. title bar remains Blue), then you must tether the Smart device to the device in your vehicle.




- 8 Tap the Tether icon on the **SmartFleet Main Menu** to connect your Smart Device to the appropriate vehicle.

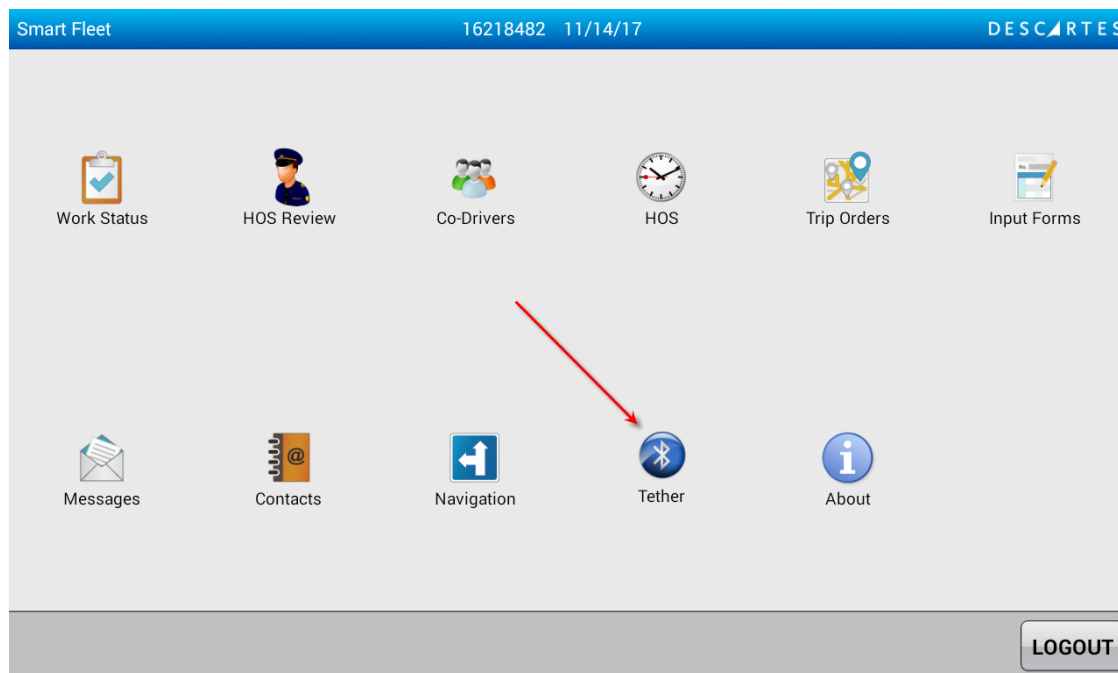

9 Tap **Find** to discover the available assets.

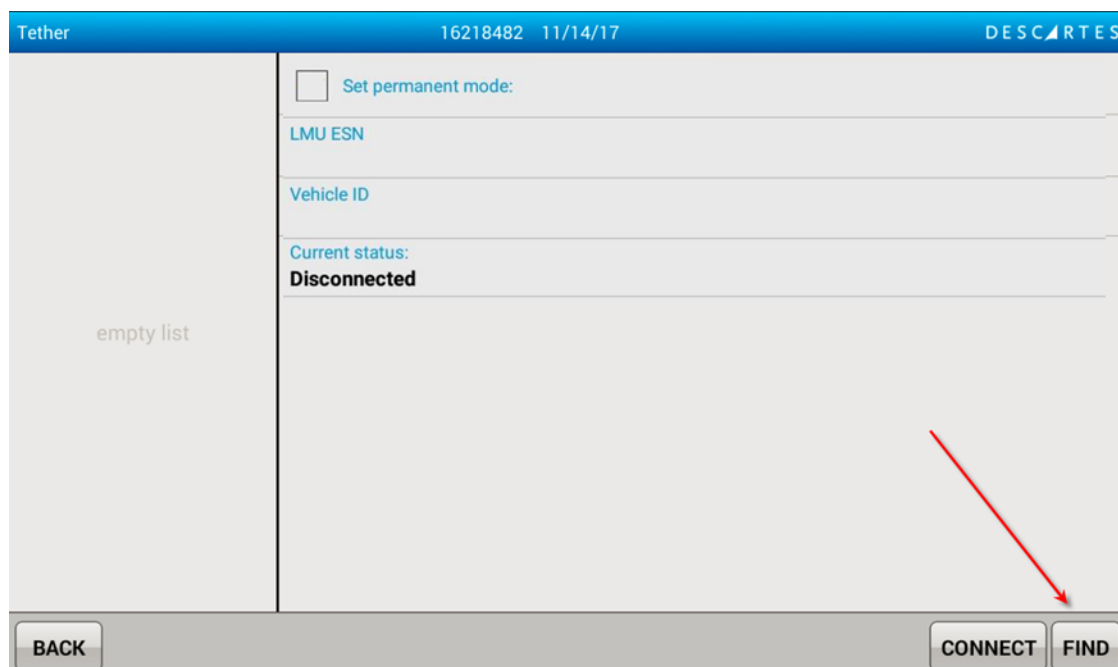

10 The available assets truck numbers are displayed on the left side.

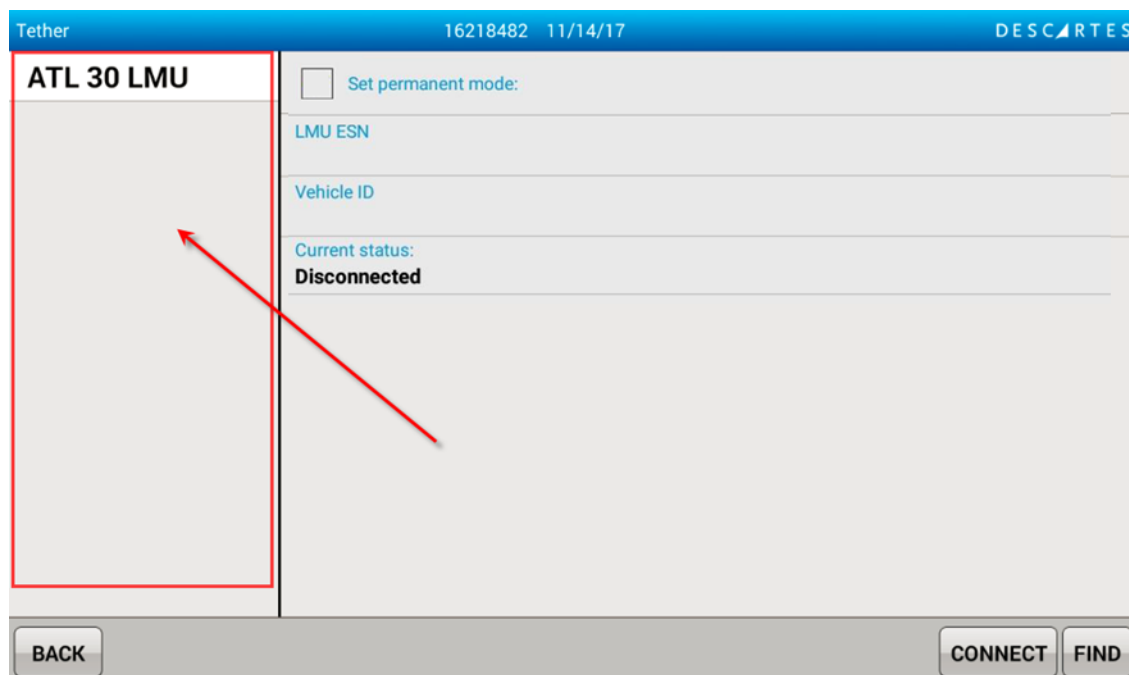

Tether 16218482 11/14/17 DESCARTES

ATL 30 LMU

☐ Set permanent mode:

LMU ESN


Vehicle ID

Current status:
Disconnected

BACK CONNECT FIND


11 Select the truck that you will be driving.

12 If you want your Smart Device to 'remember' the selected device in the truck and automatically connect to that device for all future connections, then select the **Set permanent mode** checkbox. With this option, drivers do not need to manually tether if they use the same truck. This setting is remembered until disabled manually

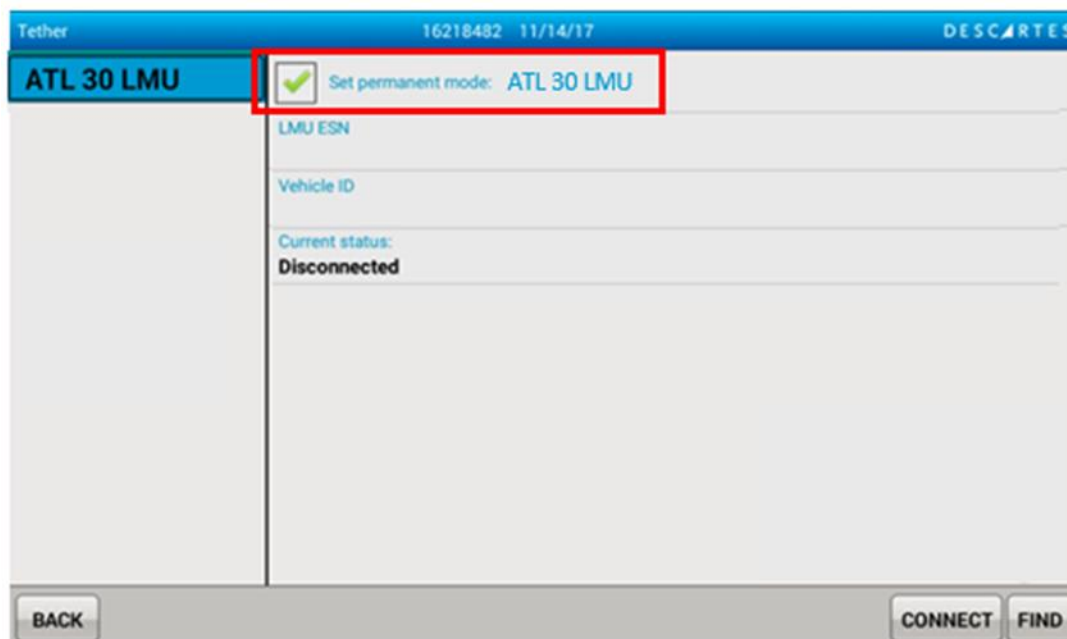


13 Select **Connect**.

14 Your Smart Device will pair over Bluetooth to the device in the truck. You can see it is successfully paired, because the top line will color green and the details of the device in your truck will be displayed. If you have not paired to the correct vehicle, tap Disconnect and repeat the process.

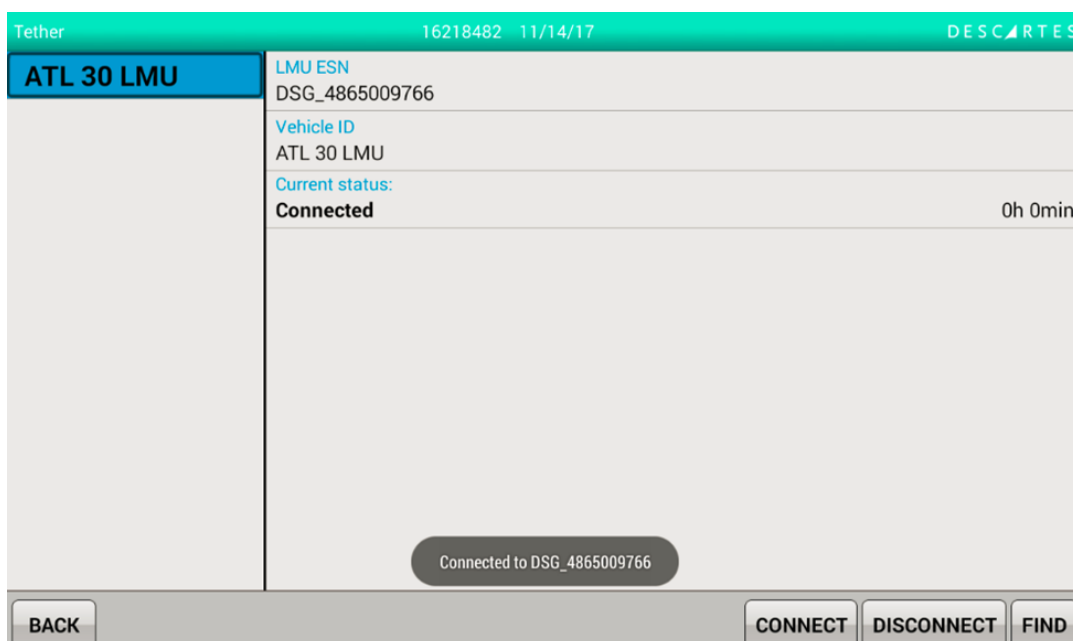

15 Select **Back** to return to the **SmartFleet Main Menu**.

16 Following successful tether to the vehicle, if there are unidentified driver logs associated with this vehicle, the driver is informed.

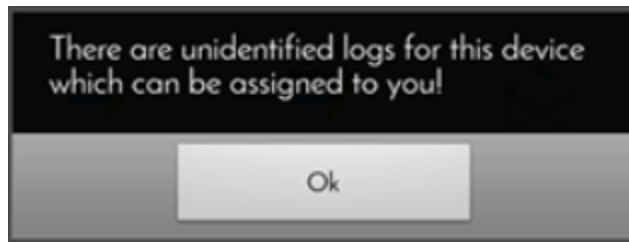

Unidentified Driver Logs can be viewed and claimed by the driver by selecting the Unidentified Logs icon on the Main Menu. See section Unidentified Driver for further details.











On the Road

Descartes SmartFleet Main Menu

The icons displayed in the main **SmartFleet** menu are subject to your company's settings. The actual layout on your device may differ from the one provided below.

  The **HOS**, **HOS Review**, **Work Status**, **Events** and **Co-Driver** icons are always displayed. The **Trip Orders**, **Input Forms**, **Messages** and **Navigation** icons may also be displayed depending on your company's configuration.

The options available from the main menu are summarized below:

Icon	Description
 Work Status	View current duty status, switch to new duty status
 HOS Review	Allows an authorized safety official to review and receive (by email or Web Service) HOS reports
 HOS	Review and certify HOS logs
 Co-Drivers	Allows co-driver to login
 Unidentified logs	View Unidentified Driver Logs
 Messages	Read messages sent from the back-office, send messages to the back-office
 Input Forms	Collect information while progressing your route, signature, pictures, etc.
 Trip Orders	View stops on route and confirm Stop completion. (POD)
 Navigation	Invoke navigation to provide voice guided driving directions and maps.
 Tether	Allows the driver to connect his Smart Device to the vehicle (via Bluetooth) This option is available on the Descartes Telematics Smart Device only.


Work Status

The **Work Status** screen displays available Work Status options. Drivers can select from different statuses listed on the screen. The following statuses are always available:

- Off Duty
- Sleeper Berth
- Driving
- On Duty Not Driving

The following statuses may also be available if configured.

- Yard Moving
- Personal Conveyance

 **Note**— The “Personal Conveyance” and “Yard Moving” statuses are always displayed, but will appear grayed out if they are not configured to be available.

Once you log in, if you do not select a Duty Status within a configured time period, your Duty Status will be set to the Descartes FleetCenter default status configured for your company. This status is highlighted on the **Work Status** screen.

Work Status		16218482 10/03/17	DESCARTES
Pre Trip ON DUTY	Driver Name	Driver ID	
	Driver Test	12345	
ON Duty ON DUTY	Carrier name		
	Test Driving Company		
	Carrier DOT number		
	987654321		
Driving DRIVING	Exempt from ELD		
	No		
	Vehicle ID		
	Test Truck		
Rest Break OFF DUTY	Current status:		
	ON Duty	0h 1min	
Post Trip ON DUTY	Logged in since	10:36:52AM	
OFF Duty OFF DUTY			

BACK
HOS
TRIP ORDERS
CO-DRIVERS
SUMMARY
ASSIGNMENTS

Based on your configuration, there may be multiple "On Duty Not Driving" statuses. In the example above, the driver has an additional "On Duty Not Driving" status configured:

- Pre Trip (ON DUTY)
- Post Trip (ON DUTY)


The **Work Status** screen also displays key details about you and your company:

Work Status		16218482 10/03/17	DESCARTES
Pre Trip ON DUTY	Driver Name	Driver ID	
	Driver Test	12345	
ON Duty ON DUTY	Carrier name		
	Test Driving Company		
	Carrier DOT number		
	987654321		
	Exempt from ELD		
	No		
	Vehicle ID		
	Test Truck		
	Current status:		
	ON Duty	0h 1min	
	Logged in since 10:36:52AM		
Driving DRIVING			
Rest Break OFF DUTY			
Post Trip ON DUTY			
OFF Duty OFF DUTY			
BACK	HOS	TRIP ORDERS	CO-DRIVERS
	SUMMARY	ASSIGNMENTS	

Drivers can manually change their duty status, but only when the vehicle is stationary.


To manually change duty status:

- 1 Navigate to the **Work Status** screen.

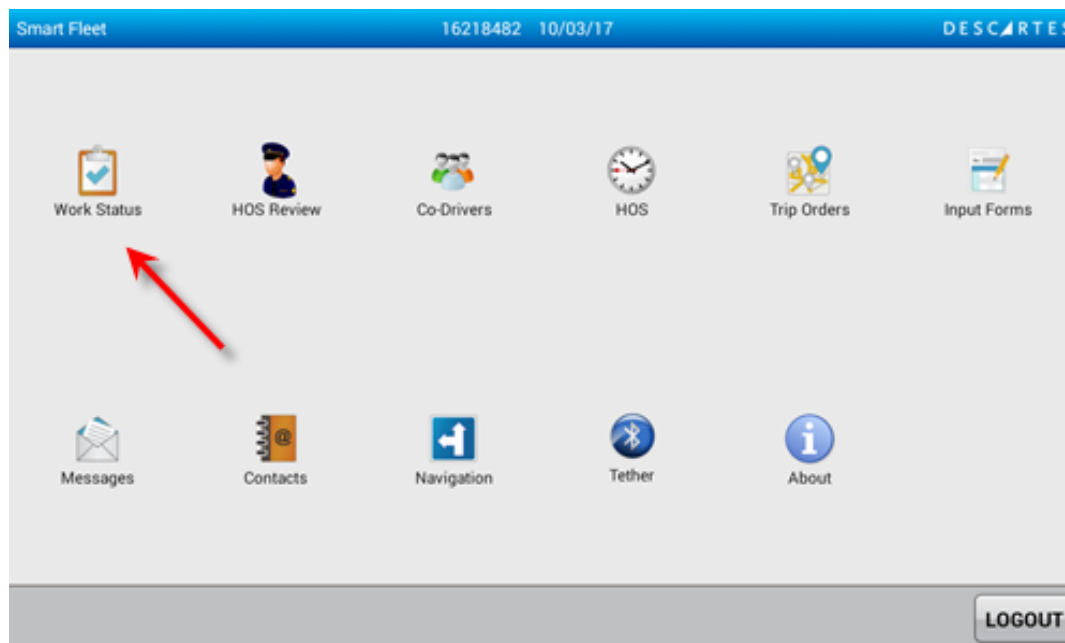

- 2 Select the appropriate status from the list on the left pane.

➡ **Note**— Drivers cannot manually change status to "Driving".

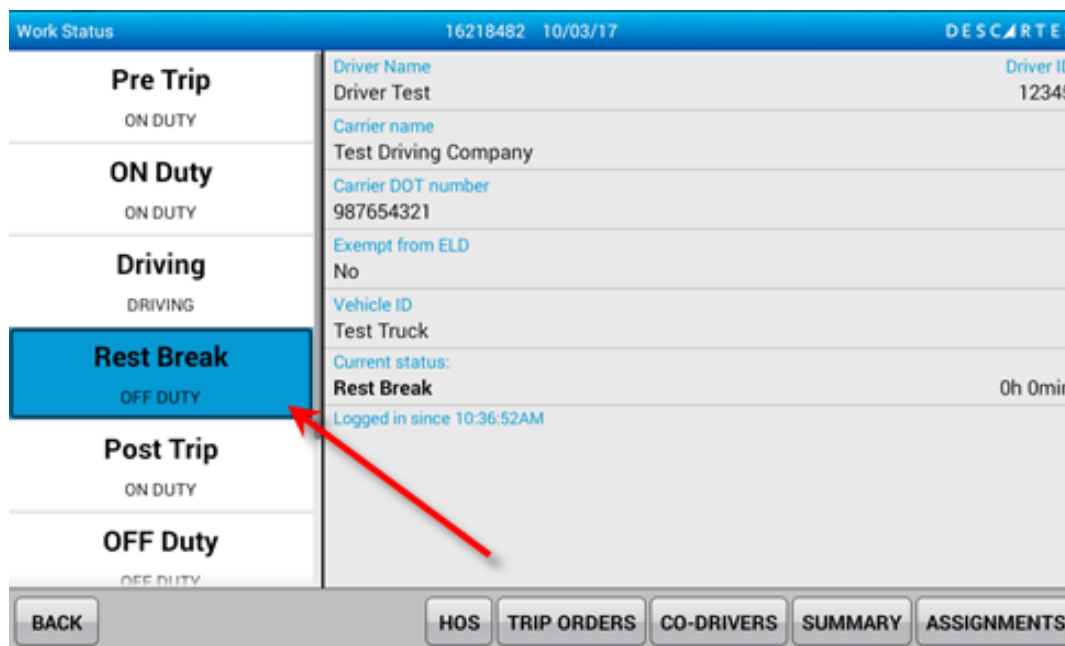


The status change notification appears briefly and the selected duty status is assigned.

Automatic Status Changes

Status changes to or from "Driving" status are automatic. Descartes SmartFleet automatically sets the duty status to "Driving" when the vehicle exceeds a set speed threshold of greater than five miles per hour.

When the duty status is set to "Driving" and the vehicle has not been in motion for five consecutive minutes, the driver is prompted to respond to a confirmation dialog to continue in "Driving" status or enter the proper duty status.

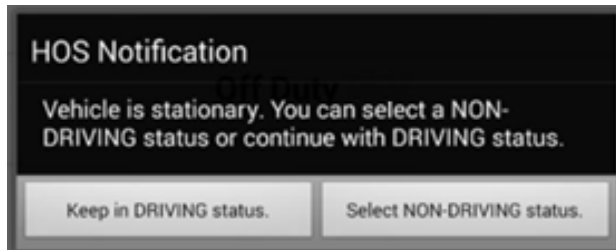


If the driver does not respond to this dialog within 60 seconds, then his duty status is automatically set to "On Duty".

Trailer and Shipping Document Assignment

Drivers can assign trailers and shipping documents from the **Work Status** screen.

To assign a trailer:

- 1 Tap the **Work Status** icon on main menu. The **Work Status** screen opens. Tap the **Assignments** button.

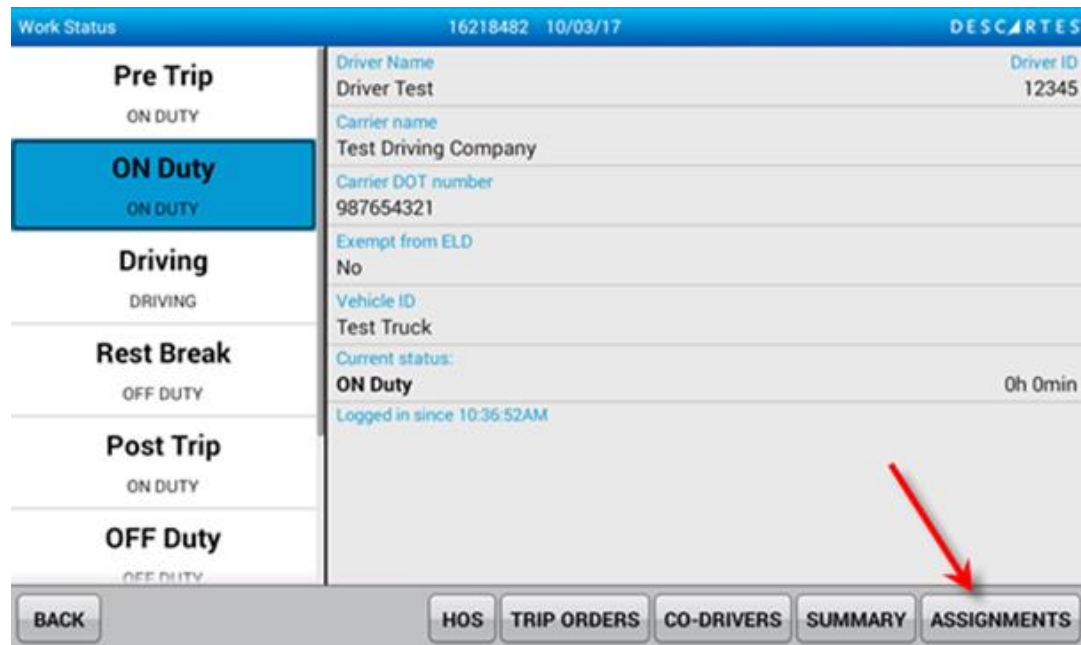

2 The **Assignments/Trailer** screen appears.

Assignments 16218482 10/03/17 DESCARTES

Trailer Shipping document

Assign trailer

BACK CONFIRM SCAN

3 Enter the applicable trailer ID.

Assignments 16218482 10/03/17 DESCARTES

Trailer Shipping document


Assign trailer

3450

BACK CONFIRM SCAN

4 Tap **Confirm** button. The trailer is assigned (viewed in HOS Status).

If there is already a trailer ID assigned, but you want to change it manually, follow the same procedure as described above except on the **Assignments/Trailer** screen first tap the **Checkout** button.

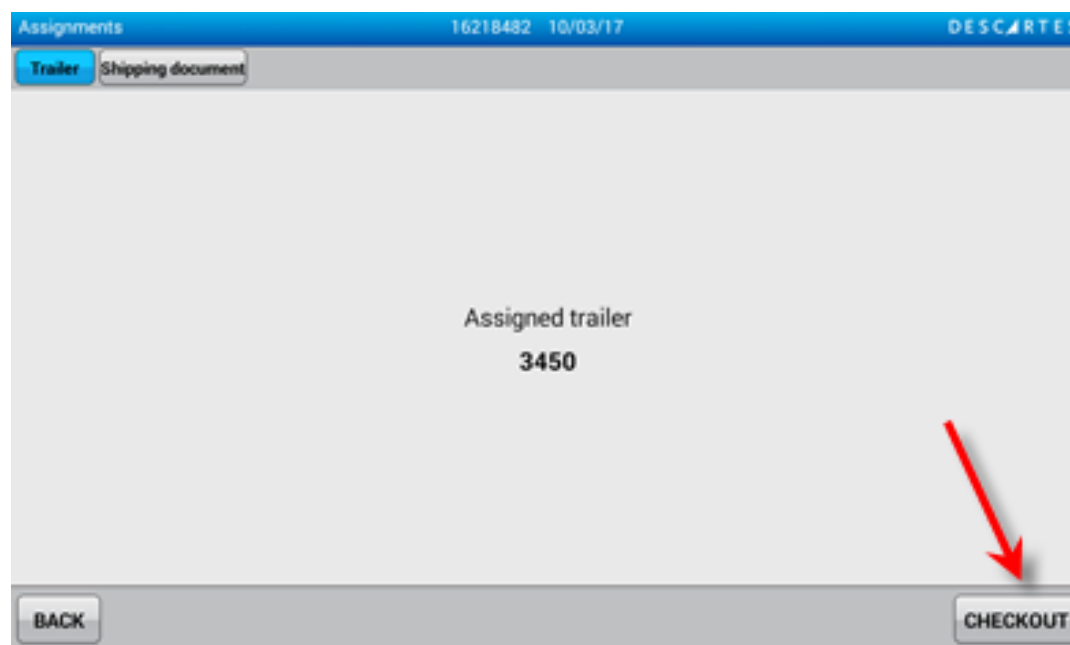

To assign a shipping doc:

- 1 Tap the **Work Status** icon on main menu. The **Work Status** screen opens. Tap the **Assignments** button.

Work Status 16218482 10/03/17 DESCARTES

Pre Trip
ON DUTY

ON Duty
ON DUTY

Driving
DRIVING

Rest Break
OFF DUTY

Post Trip
ON DUTY

OFF Duty
OFF DUTY

Driver Name: Driver Test Driver ID: 12345

Carrier name: Test Driving Company

Carrier DOT number: 987654321

Exempt from ELD: No

Vehicle ID: Test Truck

Current status: **ON Duty** 0h 0min

Logged in since 10:36:52AM

BACK HOS TRIP ORDERS CO-DRIVERS SUMMARY **ASSIGNMENTS**

The **Assignments/Trailer** screen appears.

2 Tap the **Shipping document** tab.

Assignments 16218482 10/03/17 DESCARTES

Trailer Shipping document

Assign trailer

BACK CONFIRM SCAN

3 Enter the applicable shipping document number.

Assignments 16218482 10/03/17 DESCARTES

Trailer Shipping document

Assign shipping document

A1234B

BACK CONFIRM SCAN

4 Tap the **Confirm** button. The shipping doc is assigned (viewed in HOS Status).
If there is already shipping doc number assigned, but you want to change it manually, follow the same procedure as described above except on the **Assignments/Shipping** screen first tap the **Checkout** button.

Assignments 16218482 10/03/17 DESCARTES

Trailer Shipping document


Assigned shipping document

A1234B

BACK CHECKOUT

HOS (Hours of Service)

The **HOS** option allows you to view the hours of service (HOS) for the current day and previous 7 days and certify your logs.

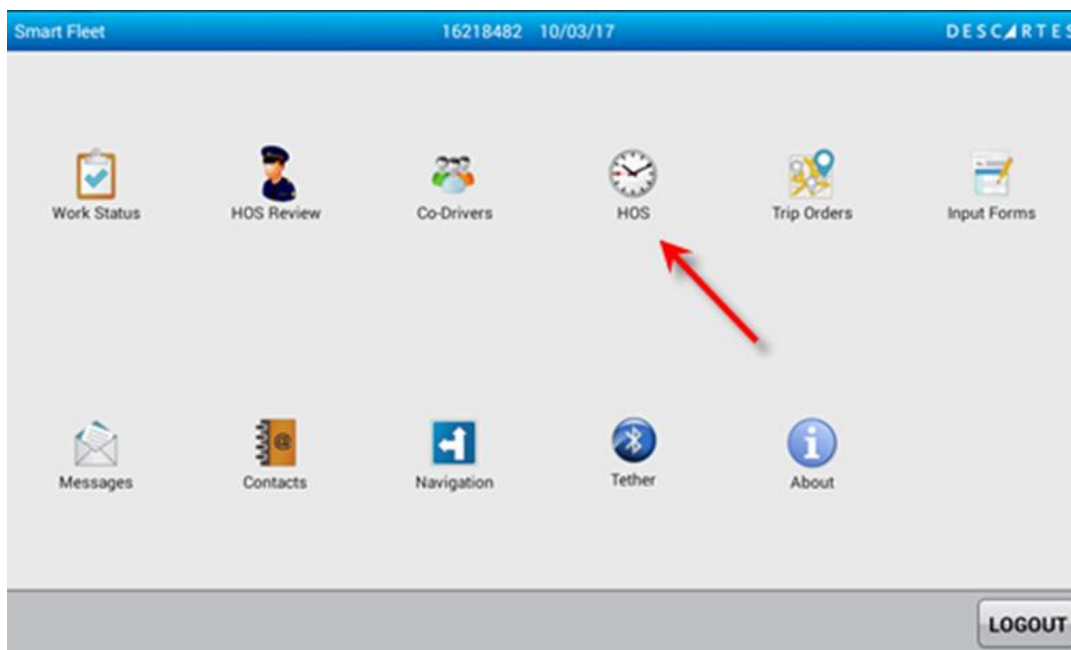

Upon selection of the **HOS** option, the **HOS Status** screen is displayed.

HOS Status

(1) Driver Status →

(2) Max Allowed Time →

(3) Spent Daily Time →

(4) Currently Applied HOS rule →

HOS Status - Driver Test		16218482 10/03/17	DESCARTES
ON DUTY			
	11 hour	14 hour	7 day
	0:00	0:42	0:38
Log sync:	10/03/17 10:36:58AM		DRIVE time left: 11:00
Shipping doc:	A1234B		Time from last rest break: 0:42
Trailer ID:	3450		Consec. time off: 0:00
			Daily distance: 0.00mi
			Weekly distance: 0.00mi

BACK CHART LOG OPTIONS BLACKBOX WORK STATUS TRIP ORDERS

The **HOS Status** screen displays the following information:

- 1 The currently active HOS status
- 2 The Max Allowed Time as defined by the applied HOS rule. From left to right, the displayed values are defined as follows:
 - Maximum allowed daily driving time
 - Maximum allowed daily on duty time
 - Maximum allowed weekly on duty time
- 3 Spent Daily Time. From left to right, the displayed values are defined as follows:
 - Spent daily driving time
 - Spent daily on duty time
 - Spent weekly on duty time

If you have less than one hour daily driving, daily on duty or weekly on duty time left, the time counters will be colored orange.

HOS Status - Driver Test			DESCARTES
ON DUTY		US 7 Day	
11 hour	14 hour	7 day	
8:51	13:32	18:42	
Log sync:	09/06/17 11:36PM	DRIVE time left:	0:27
Shipping doc.:	Nr 0098	Consec. time off	0:00
Trailer ID:	61561	Daily distance:	0.00mi
		Weekly distance:	0.00mi

If you are in violation of on duty and/or driving time and/or weekly on duty time, time counters will be colored red.

HOS Status - Driver Test			DESCARTES
OFF DUTY		US 7 Day	
11 hour	14 hour	7 day	
17:30	27:27	18:15	
Log sync:	09/04/17 2:54PM	DRIVE time left:	0:00
Shipping doc.:	Nr 0098	Consec. time off	9:12
Trailer ID:	61561	Daily distance:	0.00mi
		Weekly distance:	0.00mi


4 The currently applied HOS rule

HOS Chart

Tap the **Chart** button to display a graphical representation of HOS status changes with the total number of hours in each Duty Status:


- **OFF** – Off Duty
- **SB** – Sleeper Berth
- **D** – Driving
- **ON** – On Duty Not Driving

Remarks and annotations are represented by black dots on the chart. The portions of the chart that are shaded in red represent violations of "On Duty" or "Driving" status.

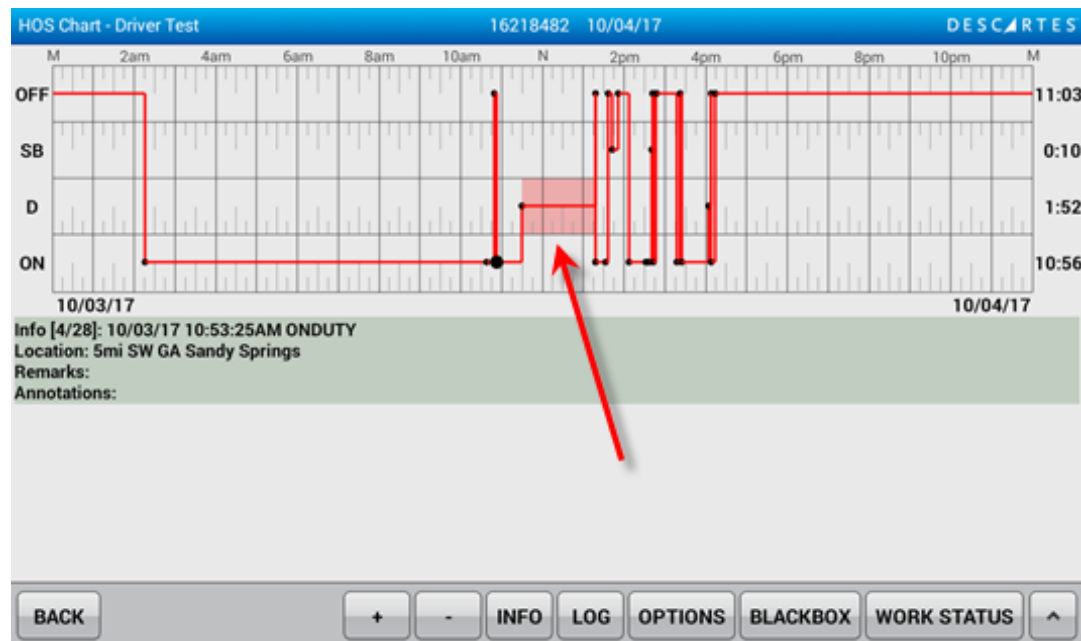


In the section below the chart, drivers can view additional information, including remarks/annotations, locations and timestamp. The remark/annotation currently displayed is represented by the black dot on the chart. Scroll through the remarks by tapping the left or right side of the screen.

The portions of the chart that are shaded in blue represent the period of a 34-hour restart.

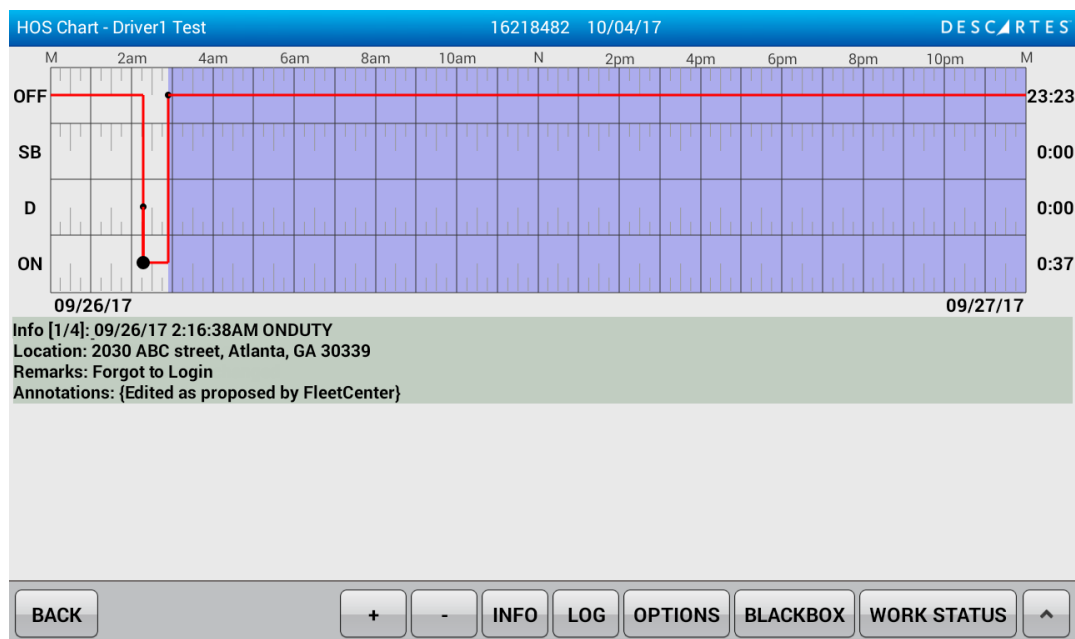

Tap the plus and minus icons to zoom in and out of the chart, respectively. Tap the carat (^) icon to display additional navigation options.

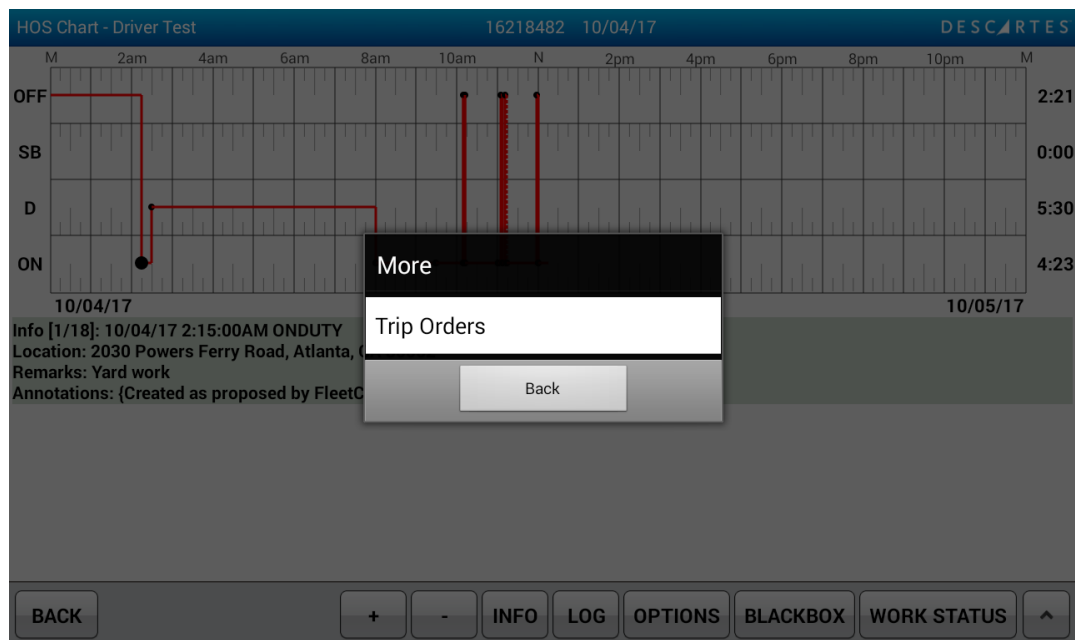




Reviewing and Certifying HOS Logs

Drivers can review HOS logs in Descartes SmartFleet to certify and enter remarks. To review HOS logs, on the **HOS Status** screen, tap the **Log** button. The **HOS Log** screen appears, listing all available days.

HOS Log - Driver Test	16218482	10/03/17	DESCARTES
10/03/17 Sum driving time: 0:00 Sum duty time: 2:54 Total distance: 0.00mi	<input type="button" value="Certify All"/> <input type="button" value="View"/>		Certified: 8/9
10/02/17 Sum driving time: 0:00 Sum duty time: 0:00 Total distance: 0.00mi			Certified: 0/0
10/01/17 Sum driving time: 0:00 Sum duty time: 0:00 Total distance: 0.00mi			Certified: 0/0
09/30/17 Sum driving time: 0:00 Sum duty time: 0:00 Total distance: 0.00mi			Certified: 0/0
09/29/17 Sum driving time: 0:00 Sum duty time: 0:00			Certified: 0/0
<input type="button" value="BACK"/> <input type="button" value="CHART"/> <input type="button" value="INFO"/> <input type="button" value="OPTIONS"/> <input type="button" value="BLACKBOX"/> <input type="button" value="WORK STATUS"/> <input type="button" value="TRIP ORDERS"/>			

An HOS log summary is listed for each day. The number of Certified logs are listed against the total for each record. The records are color-coded to indicate the certification status of each day's logs:

-  Green log field if all logs for the day are certified by driver
-  Red log field if none or part of the log is certified
-  White log field if there are no records for that day

Viewing HOS Logs

On the **HOS Log** screen, tap **View** to display all logs for a given day.

HOS Log - Driver Test		16218482 10/03/17	DESCARTES
MANUAL ENTRY: 10/03/17 1:51:49PM OFF DUTY Location: Remarks: Manual entry Annotations: {Created in SmartFleet}		<input type="button" value="Edit"/>	
STATE CHANGE: 10/03/17 1:42:40PM SLEEPER BERTH Location: 5mi SW GA Sandy Springs Remarks: Annotations:		<input type="button" value="Edit"/>	
MANUAL ENTRY: 10/03/17 1:36:07PM OFF DUTY Location: Remarks: Manual log Annotations: {Created in SmartFleet}		Certified	<input type="button" value="Edit"/>
STATE CHANGE: 10/03/17 1:33:18PM ON DUTY Location: 5mi SW GA Sandy Springs Remarks: Annotations:		Certified	<input type="button" value="Edit"/>
<input type="button" value="BACK"/>			

The **HOS Log** screen displays the following details for each log on the selected day:

- Status changes organized by time
- Location and timestamp of every status change
- Remarks and annotations, if available:
 - Remarks entered by driver
 - Annotations entered by the system:
 - When driver reports exception
 - When driver reports personal conveyance
 - When vehicle crosses state border

HOS Log - Driver Test		16218482 10/03/17	DESCARTES
Location: 5mi SW GA Sandy Springs Remarks: Annotations:			
STATE CHANGE: 10/03/17 1:18:01PM OFF DUTY Location: 5mi SW GA Sandy Springs Remarks: Annotations:		Certified	Edit
MANUAL ENTRY: 10/03/17 11:30:00AM DRIVING Location: Remarks: Driving in the yard Annotations:		Proposed (New)	Show
STATE CHANGE: 10/03/17 10:53:25AM ON DUTY Location: 5mi SW GA Sandy Springs Remarks: Annotations:		Certified	Edit
STATE CHANGE: 10/03/17 10:49:23AM OFF DUTY		Certified	Edit
<div>BACK</div>			


- Uncertified HOS logs are highlighted in white
- Certified HOS logs are highlighted in green
- Proposed (edited) logs are highlighted in yellow
- Original HOS logs are highlighted in gray
- HOS Logs recorded during a diagnostic are highlighted in orange
- HOS Logs recorded during a malfunction are highlighted in red

➡ **Note**— Drivers should certify logs before logging out. See section *Reviewing and Certifying HOS Logs*.

Creating a New HOS Log

To create a new HOS log:

- 1 Tap the **Options** button at the bottom of the **HOS Status** screen. The **HOS Options** screen appears.

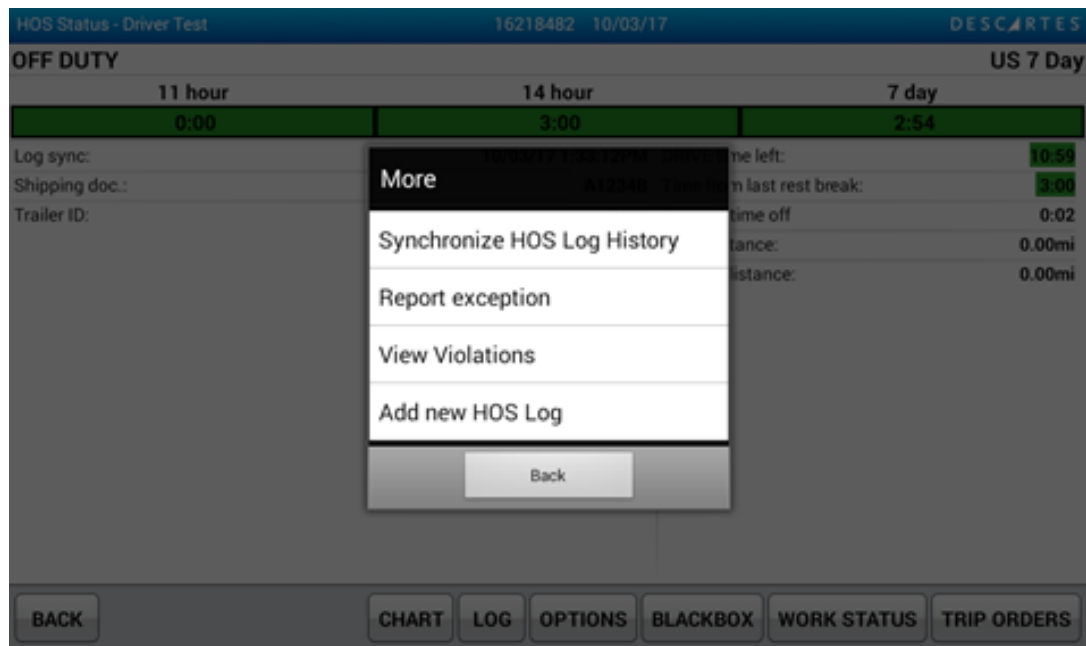

- 2 Tap **Add new HOS Log**. The **HOS Review** screen appears.

HOS Review 16200001 02/06/19 DESCARTES

M 2am 4am 6am 8am 10am N 2pm 4pm 6pm 8pm 10pm M

OFF 8:42
SB 0:00
D 0:00
ON 1:42

10/03/2017 11/03/2017

Vehicle ID Test Truck

Original

Date 10/03/17 10:24:08 AM

Status OFF DUTY

Location

Remarks Manual log

Rule US 7 Day

Shipping document A1234B

Trailer ID 3450

BACK SAVE

- 3 Current time, "Off Duty" status and Rule are automatically populated. Make any edits if necessary.

HOS Review 16200001 02/06/19 DESCARTES

M 2am 4am 6am 8am 10am N 2pm 4pm 6pm 8pm 10pm M

OFF 8:42
SB 0:00
D 0:00
ON 1:42

10/03/2017 10/04/2017

Vehicle ID Test Truck

Original

Date 10/03/2017 10:24:08 AM

Status DRIVING

Location

Remarks Manual Log

Rule US 7 Day

Shipping document A1234B

Trailer ID 3450

BACK SAVE

- 4 The edit and its impact on the HOS log are identified as a Red line on the chart.
- 5 Tap the **Save** button to complete the new log.
- 6 You can view the logs on the **HOS Log** screen. Tap **Log** on the **HOS Status** screen.

HOS Status - Driver Test		16218482 10/03/17	DESCARTES
ON DUTY		US 7 Day	
11 hour	14 hour	7 day	
0:00	0:42	0:38	
Log sync:	10/03/17 10:36:58AM	DRIVE time left:	11:00
Shipping doc.:	A1234B	Time from last rest break:	0:42
Trailer ID:	3450	Consec. time off	0:00
		Daily distance:	0.00mi
		Weekly distance:	0.00mi

Navigation bar: BACK, CHART, LOG, OPTIONS, BLACKBOX, WORK STATUS, TRIP ORDERS

- 7 The **HOS Log** screen is displayed. Tap on the **HOS LOG** to select the day for which you want to check the log. Then tap **View**

HOS Log - Driver Test		16218482 10/03/17	DESCARTES
10/03/17 Sum driving time: 0:00 Sum duty time: 2:54 Total distance: 0.00mi		Certify All View Certified: 8/9	
10/02/17 Sum driving time: 0:00 Sum duty time: 0:00 Total distance: 0.00mi		Certified: 0/0	
10/01/17 Sum driving time: 0:00 Sum duty time: 0:00 Total distance: 0.00mi		Certified: 0/0	
09/30/17 Sum driving time: 0:00 Sum duty time: 0:00 Total distance: 0.00mi		Certified: 0/0	
09/29/17 Sum driving time: 0:00 Sum duty time: 0:00		Certified: 0/0	
<div> BACK CHART INFO OPTIONS BLACKBOX WORK STATUS TRIP ORDERS </div>			

- 8 Individual logs for that day are presented and can be edited, by selecting the **Edit** button.

HOS Log - Driver Test		16218482 10/03/17	DESCARTES
MANUAL ENTRY: 10/03/17 1:51:49PM OFF DUTY Location: Remarks: Manual entry Annotations: (Created in SmartFleet)		Edit	
STATE CHANGE: 10/03/17 1:42:40PM SLEEPER BERTH Location: 5mi SW GA Sandy Springs Remarks: Annotations:		Edit	
MANUAL ENTRY: 10/03/17 1:36:07PM OFF DUTY Location: Remarks: Manual log Annotations: (Created in SmartFleet)		Certified Edit	
STATE CHANGE: 10/03/17 1:33:18PM ON DUTY Location: 5mi SW GA Sandy Springs Remarks: Annotations:		Certified Edit	
<div>BACK</div>			

Certifying Logs

To certify logs for the entire day, tap the **Certify All** button on the initial **HOS Log** screen.

HOS Log - Driver Test 16218482 10/03/17 DESCARTES

Date	Sum driving time	Sum duty time	Total distance	Certified
10/03/17	0:00	2:54	0.00mi	8/9
10/02/17	0:00	0:00	0.00mi	0/0
10/01/17	0:00	0:00	0.00mi	0/0
09/30/17	0:00	0:00	0.00mi	0/0
09/29/17	0:00	0:00	0.00mi	0/0

Buttons: BACK, CHART, INFO, OPTIONS, BLACKBOX, WORK STATUS, TRIP ORDERS

Tap **Agree** on the confirmation dialog to continue.

HOS Log - Driver Test 16218482 10/03/17 DESCARTES

Date	Sum driving time	Sum duty time	Total distance	Certified
10/03/17	1:48	2:54	0.00mi	8/11
10/02/17	0:00	0:00	0.00mi	0/0
10/01/17	0:00	0:00	0.00mi	0/0
09/30/17	0:00	0:00	0.00mi	0/0
09/29/17	0:00	0:00	0.00mi	0/0

Buttons: BACK, CHART, INFO, OPTIONS, BLACKBOX, WORK STATUS, TRIP ORDERS


Certify Data

I hereby certify that my data entries and my record of duty status for this 24-hour period are true and correct.


Agree Not ready

Reviewing and Certifying Proposed HOS Logs

In Descartes FleetCenter, when a supervisor proposes a new HOS log or edits an existing one in Descartes FleetCenter, the driver is notified in Descartes SmartFleet.

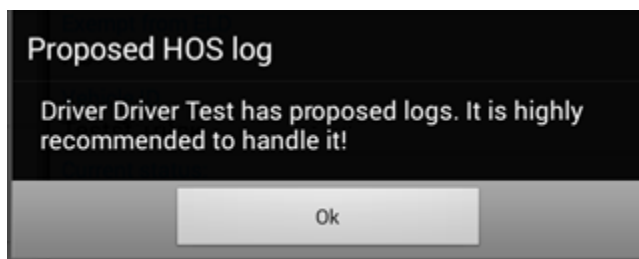

- 1 Tap **OK** to dismiss the notification and view the proposed logs. Tap the **View** button to display all logs for the selected day.

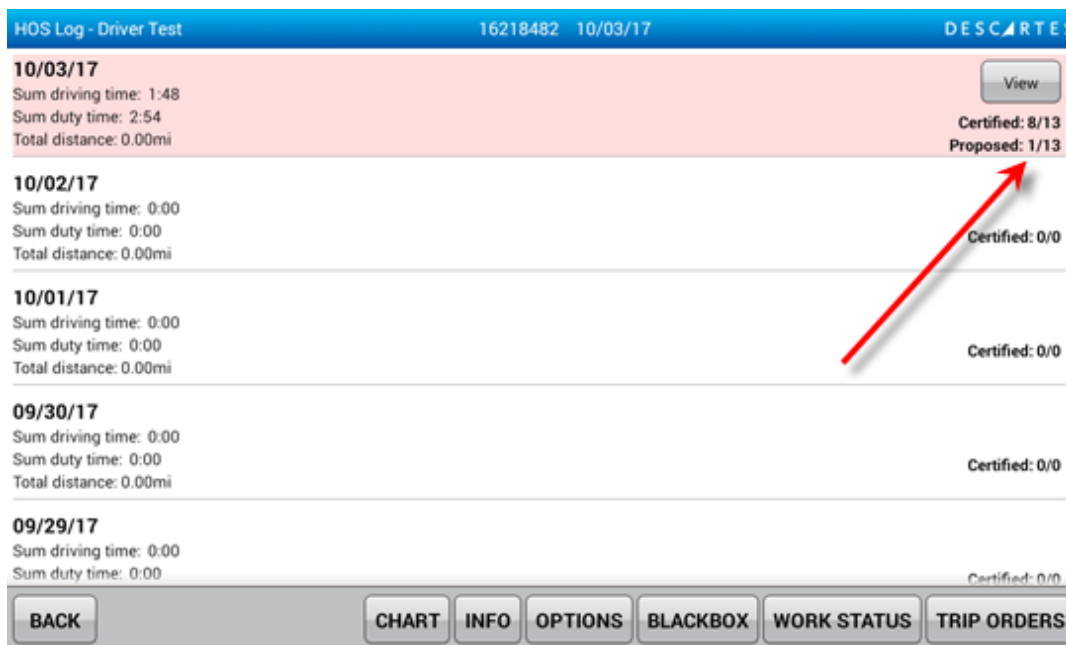


- 2 The **HOS Log** screen appears. Find the **Proposed Log**.

The screenshot displays the 'HOS Log - Driver Test' interface for user 16218482 on 10/03/17. It lists four duty status entries. The first three are 'ON DUTY' and 'OFF DUTY' with 'Certified' status. The fourth entry, starting at 8:00:00AM, is 'ON DUTY' with a 'Proposed (New)' status, highlighted in yellow. A red arrow points to the 'Show' button for this entry. A 'BACK' button is at the bottom left.

Entry	Status	Location	Remarks	Annotations	Action
1	ON DUTY	5mi SW GA Sandy Springs			Edit
2	STATE CHANGE: 10/03/17 10:49:23AM OFF DUTY	5mi SW GA Sandy Springs			Certified Edit
3	STATE CHANGE: 10/03/17 10:37:53AM ON DUTY	5mi SW GA Sandy Springs			Certified Edit
4	MANUAL ENTRY: 10/03/17 8:00:00AM ON DUTY	2030 ABC street, Atlanta, GA 30339	Forgot to Login		Proposed (New) Show

BACK

- 3 Tap the **Show** button to review the log and make any necessary changes. The **HOS Review** screen appears.

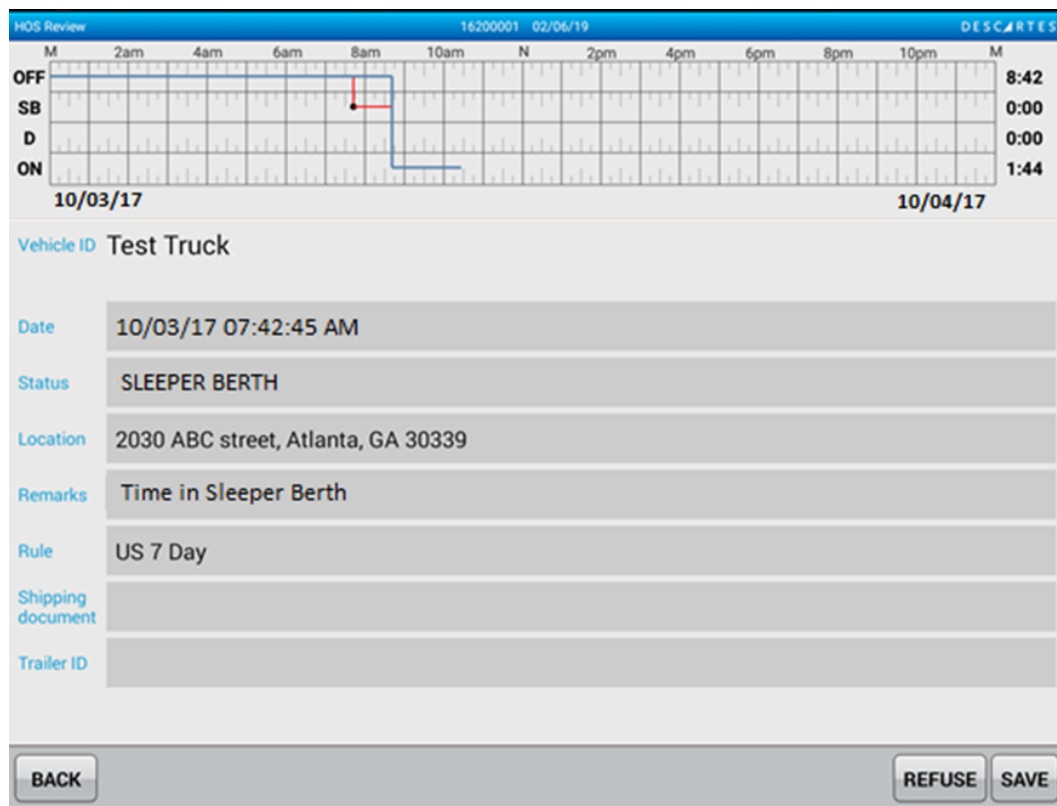

- 4 The impact of the Proposed Log on the HOS log is identified as a Red line on the chart.
- 5 Tap **Save** to save the edits or tap **Refuse** to refuse the log. When the log is saved, you can then certify the log.
- 6 To certify logs for the entire day, tap the **Certify All** button.

HOS Log - Driver Test 16218482 10/03/17 DESCARTES

10/03/17
 Sum driving time: 0:00
 Sum duty time: 2:54
 Total distance: 0.00mi
 Certified: 8/9

10/02/17
 Sum driving time: 0:00
 Sum duty time: 0:00
 Total distance: 0.00mi
 Certified: 0/0

10/01/17
 Sum driving time: 0:00
 Sum duty time: 0:00
 Total distance: 0.00mi
 Certified: 0/0

09/30/17
 Sum driving time: 0:00
 Sum duty time: 0:00
 Total distance: 0.00mi
 Certified: 0/0

09/29/17
 Sum driving time: 0:00
 Sum duty time: 0:00
 Certified: 0/0

BACK CHART INFO OPTIONS BLACKBOX WORK STATUS TRIP ORDERS

- 7 Select **Agree** from the confirmation dialog. You can also postpone certification from this dialog by selecting **Not ready**.

Certify Data

I hereby certify that my data entries and my record of duty status for this 24-hour period are true and correct.

Agree Not ready

- 8 At the end of your day, if logs are not certified, you will receive a notification to certify all logs before logging out.

HOS Notification


HOS log for user Driver Test is not certified! Certify before logout!

Certify Not ready


Reporting Exceptions

Users can report exceptions such as Adverse Condition or a 16-hour Exception from within the **HOS** screen.


- 1 Tap the **Options** button at the bottom of the **HOS Status** screen. The **HOS Options** screen appears.

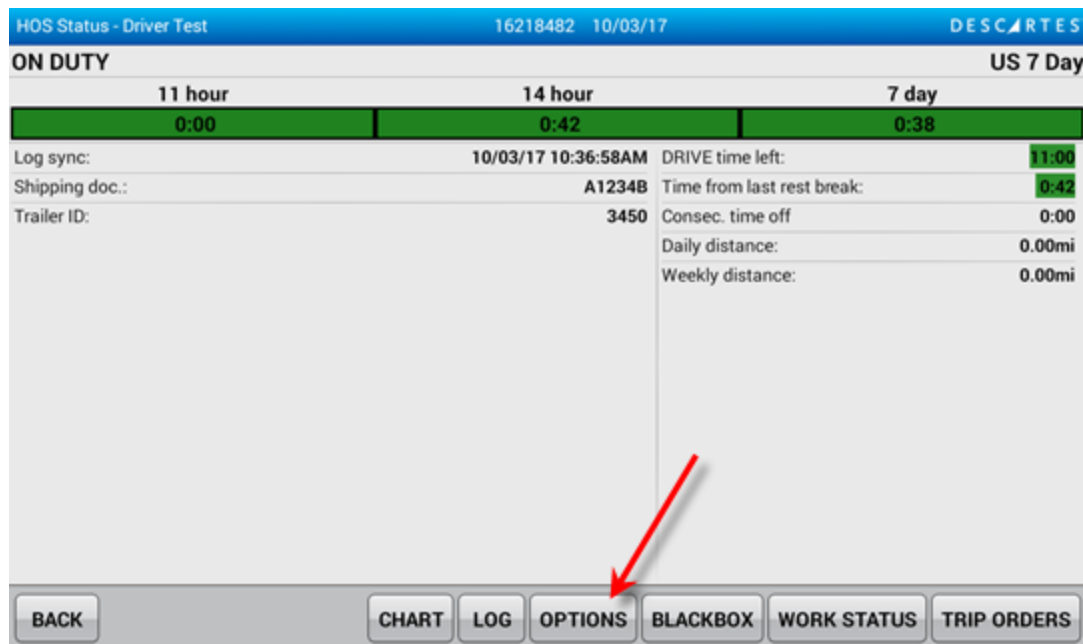


- 2 Tap **Report Exception**.

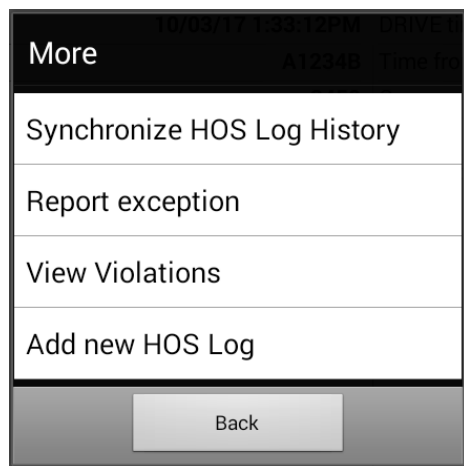


- 3 Tap the applicable exception from the **Report Exception** screen and enter appropriate Remarks.

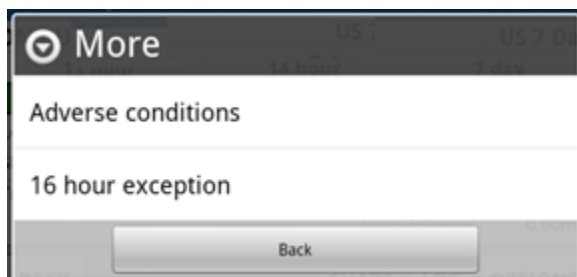

- 4 You are asked to confirm the selection. Please tap to **Engage** or tap **Cancel** if you have made a mistake in selection.

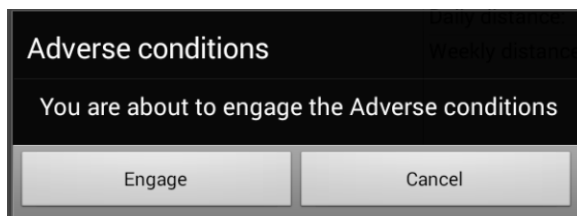

If Adverse Condition is selected, the **HOS Status** screen displays the message "Adverse Condition engaged".

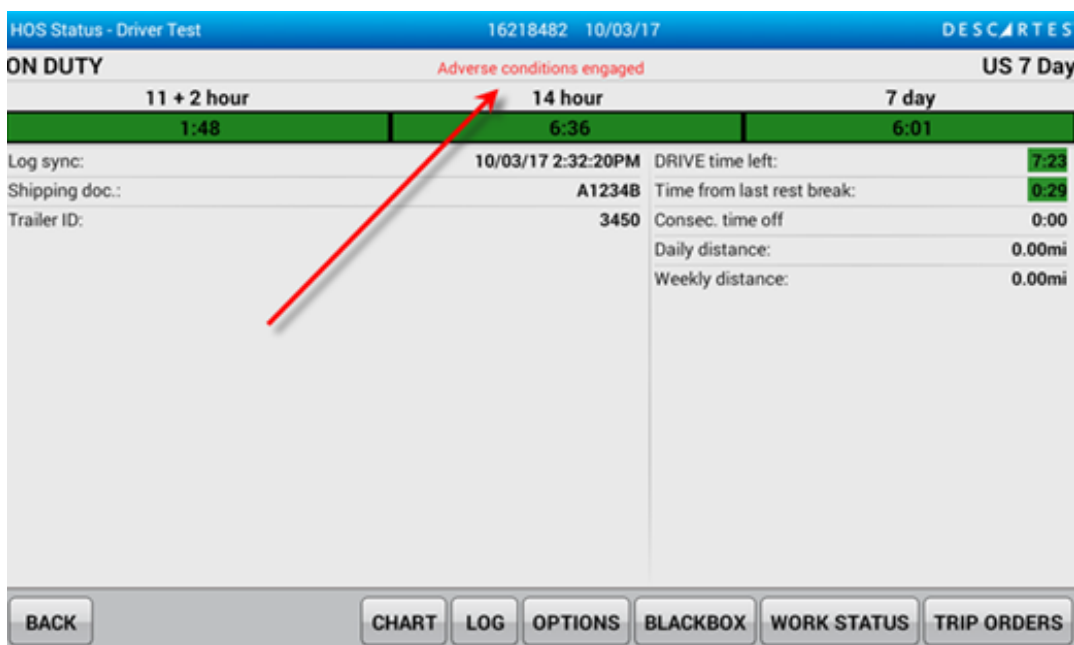

The **HOS Chart** screen displays the Adverse Condition in red text.

➡ **Note**— Users cannot enter a Remark associated with the Adverse Condition.

If 16-hour exception is selected, the exception is displayed in both the **HOS Status** screen and the **HOS Chart** screen.

HOS Status - Driver Test 16218482 10/03/17 DESCARTES

ON DUTY US 7 Day

11 hour	14 + 2 hour	7 day
0:00	0:42	0:38

Log sync: 10/03/17 10:36:58AM DRIVE time left: 11:00


Shipping doc.: A1234B Time from last rest break: 0:42

Trailer ID: 3450 Consec. time off: 0:00

Daily distance: 0.00mi


Weekly distance: 0.00mi

BACK CHART LOG OPTIONS BLACKBOX WORK STATUS TRIP ORDERS

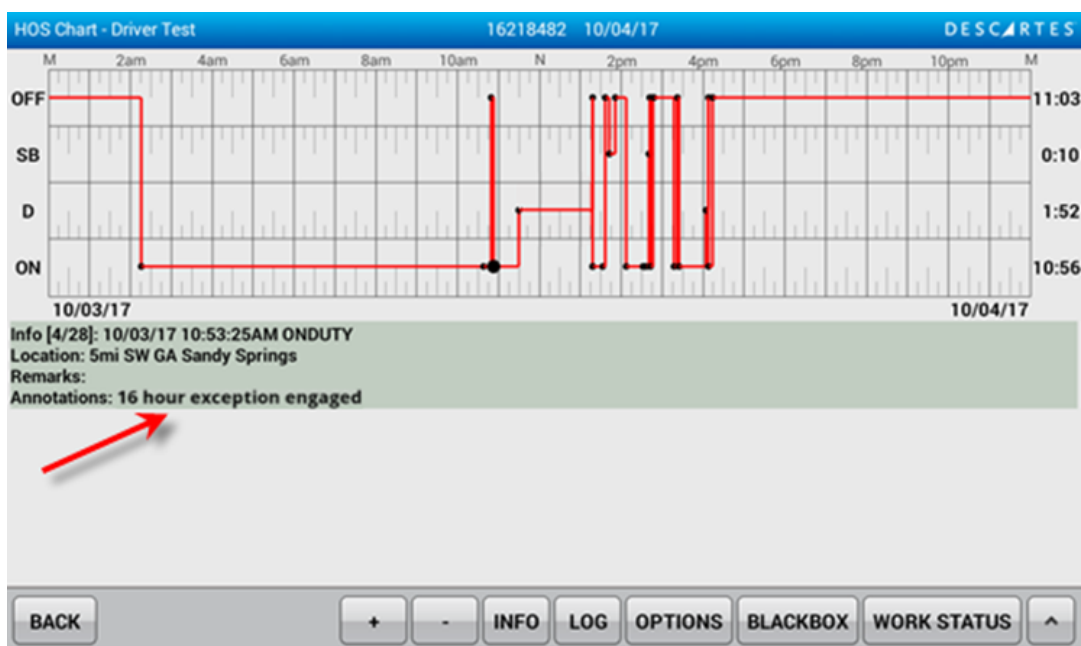


➡ **Note**— If the driver does not meet the conditions for the exception to be entered, the system displays a message to the driver indicating why the driver cannot add the exception.

If the 16Hour exception was previously engaged **but not used**, the driver can disengage the 16Hour exception. To disengage the 16Hour exception, the driver should select **Options->Report Exception-> 16Hour exception** and then **Disengage**.

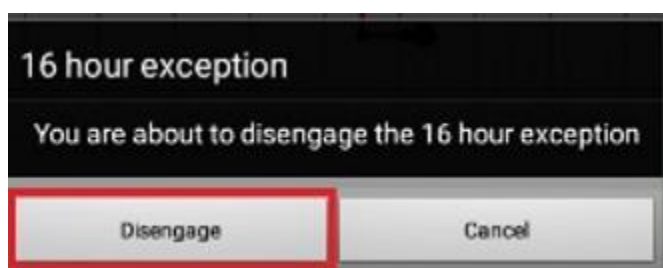


The HOS Chart shows that the 16Hour exception is disengaged.

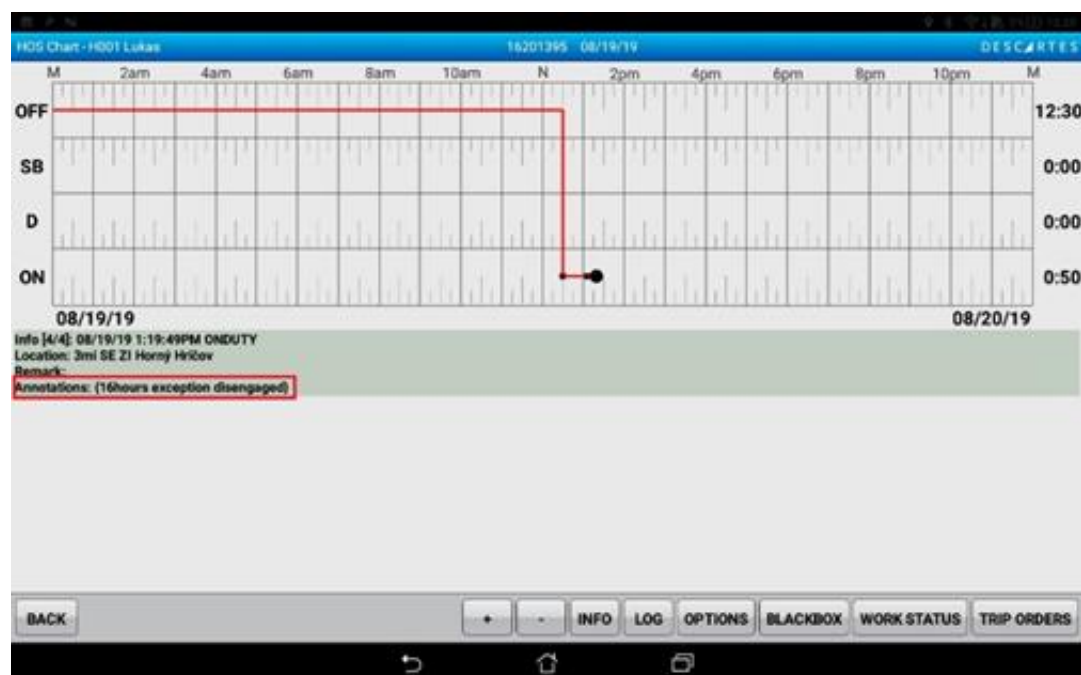

Viewing Violations

To view HOS violations in the system:


- 1 Tap the **HOS** icon from the main menu.
- 2 Tap **Options** button at the bottom of **HOS Status** screen. HOS Options dialog appears.

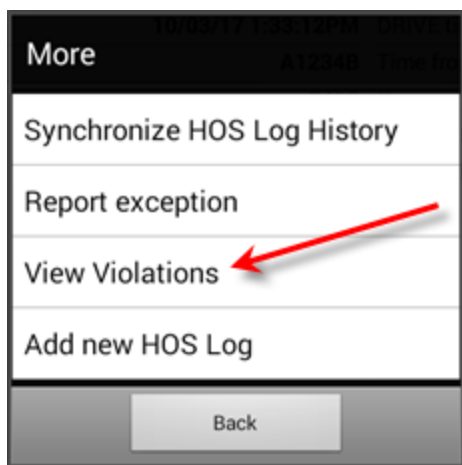

- 3 Tap **View Violations**. A list of recorded HOS violations appears.



HOS rules violations can also be viewed on the **HOS Chart** screen. The portions of the chart that are shaded in red represent violations of "On Duty" or "Driving" status.

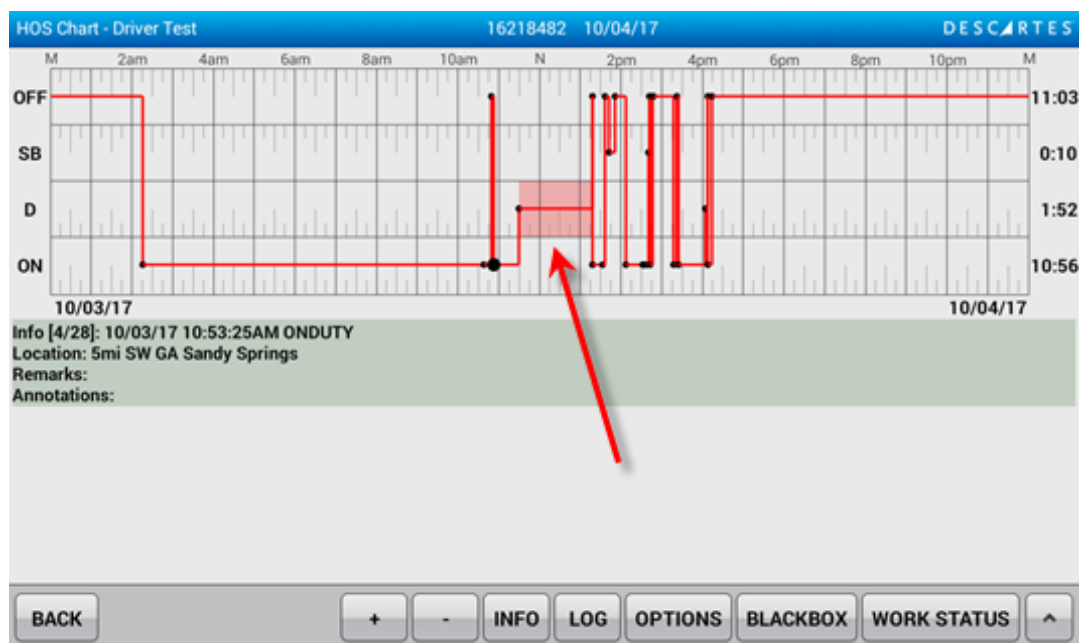

Personal Conveyance

If the "Personal Conveyance" status is configured, the **Work Status** screen displays the **Personal Conveyance** option. To identify Personal Conveyance use, select the **Personal Conveyance** option.

Work Status 16218482 10/04/17 DESCARTES

Rest Break OFF DUTY	Driver Name Driver Test Driver ID 12345
Post Trip ON DUTY	Carrier name Test Driving Company
OFF Duty OFF DUTY	Carrier DOT number 987654321
Sleeper Berth SLEEPER BERTH	Exempt from ELD No
Yard Moving engage	Vehicle ID Test Truck
Personal Conveyan.. engage	Current status: ON Duty 0h 3min Logged in since 11:07:00AM

BACK HOS TRIP ORDERS CO-DRIVERS SUMMARY ASSIGNMENTS

Users must enter a Remark associated with the Personal Conveyance Duty Status.

The screenshot shows the Descartes SmartFleet interface with a modal dialog titled "Personal conveyance" overlaid. The dialog contains the text "Enter remark please:" followed by a text input field. Below the input field are two buttons: "Confirm" and "Cancel". The background interface shows a list of duty status options on the left: Rest Break (OFF DUTY), Post Trip (ON DUTY), OFF Duty (OFF DUTY), Sleeper Berth (SLEEPER BERTH), Yard Moving (engage), and Personal Conveyan.. (engage). The right side of the interface displays driver information: Driver Name (Driver Test), Driver ID (12345), Carrier name (Test Driving Company), Carrier DOT number (987654321), Exempt from ELD (No), Vehicle ID (Test Truck), Current status (ON), and Logged in since (0h 3min). At the bottom, there are navigation buttons: BACK, HOS, TRIP ORDERS, CO-DRIVERS, SUMMARY, and ASSIGNMENTS.

When Personal Conveyance is activated, it is highlighted and all other Duty Statuses are disabled.

The screenshot shows the Descartes SmartFleet interface with the "Personal Conveyance" duty status selected and highlighted in blue. The left side of the interface shows the list of duty status options: Rest Break (OFF DUTY), Post Trip (ON DUTY), OFF Duty (OFF DUTY), Sleeper Berth (SLEEPER BERTH), Yard Moving (disengage), and Personal Conveyance (disengage). The right side of the interface displays driver information: Driver Name (Driver Test), Driver ID (12345), Carrier name (Test Driving Company), Carrier DOT number (987654321), Exempt from ELD (No), Vehicle ID (Test Truck), Current status (Personal Conveyance), and Logged in since (11:07:00AM). At the bottom, there are navigation buttons: BACK, HOS, TRIP ORDERS, CO-DRIVERS, SUMMARY, and ASSIGNMENTS.

Even when driving, the Personal Conveyance status remains engaged.

Descartes SmartFleet continues to record HOS while “Personal Conveyance” status is engaged and will identify Personal Conveyance in the **HOS** screen.

The screenshot displays the 'HOS Status - Driver Test' screen for user 16218482 on 10/05/17. The status is 'OFF DUTY' with a red box highlighting 'Personal conveyance ENGAGED'. A red arrow points to this status. The screen shows three time periods: 11 hour (0:00), 14 hour (1:31), and 7 day (19:42). The 14 hour period is currently active. The screen also displays various metrics: Log sync: 10/05/17 12:21:30PM, Shipping doc.: A1234B, Trailer ID: 3450, DRIVE time left: 11:00, Time from last rest break: 0:05, Consec. time off: 0:00, Daily distance: 0.00mi, and Weekly distance: 0.00mi. At the bottom, there are buttons for BACK, CHART, LOG, OPTIONS, BLACKBOX, WORK STATUS, and TRIP ORDERS.

HOS Status - Driver Test		16218482 10/05/17	DESCARTES
OFF DUTY		Personal conveyance ENGAGED	US 7 Day
11 hour	14 hour	7 day	
0:00	1:31	19:42	
Log sync:	10/05/17 12:21:30PM	DRIVE time left:	11:00
Shipping doc.:	A1234B	Time from last rest break:	0:05
Trailer ID:	3450	Consec. time off	0:00
		Daily distance:	0.00mi
		Weekly distance:	0.00mi
BACK		CHART	LOG
		OPTIONS	BLACKBOX
		WORK STATUS	TRIP ORDERS

Note that the Personal Conveyance is indicated as “Off Duty” with a dotted line. In addition, the driver location associated with the HOS is recorded but offset to about 10 miles from the actual location.

If the engine goes through a Power Off cycle while Personal Use is activated, Descartes SmartFleet will ask the driver to confirm Personal use.

Yard Moving

If the "Yard Moving" status is configured, the **Work Status** screen displays the **Yard Moving** option. To identify Yard Moving use, select the **Yard Moving** option.

Work Status		16218482 10/04/17	DESCARTES
Rest Break OFF DUTY	Driver Name Driver Test	Driver ID 12345	
Post Trip ON DUTY	Carrier name Test Driving Company		
OFF Duty OFF DUTY	Carrier DOT number 987654321		
Sleeper Berth SLEEPER BERTH	Exempt from ELD No		
Yard Moving engage	Vehicle ID Test Truck		
Personal Conveyan. engage	Current status: ON Duty	0h 3min	
	Logged in since 11:07:00AM		

BACK HOS TRIP ORDERS CO-DRIVERS SUMMARY ASSIGNMENTS

Users must enter a Remark associated with the Yard Moving Duty Status.

Yard moving

Enter remark please:

yard moving

Confirm Cancel

When Yard Moving is activated, it is highlighted and all other Duty Statuses are disabled.

Work Status		16218482 10/04/17	DESCARTES
Rest Break OFF DUTY	Driver Name Driver ID Driver Test 12345		
Post Trip ON DUTY	Carrier name Test Driving Company		
OFF Duty OFF DUTY	Carrier DOT number 987654321		
Sleeper Berth SLEEPER BERTH	Exempt from ELD No		
Yard Moving disengage	Vehicle ID Test Truck		
Personal Conveyance disengage	Current status: Personal Conveyance 0h 0min		
Logged in since 11:07:00AM			
<div> BACK HOS TRIP ORDERS CO-DRIVERS SUMMARY ASSIGNMENTS </div>			

Even when driving, the Yard Moving status remains engaged.

Descartes SmartFleet continues to record HOS while "Yard Moving" status is engaged and will identify Yard Moving in the **HOS** screen. Note that the Yard Moving is indicated as "On Duty" with a dotted line.


The user should disengage **Yard Moving** when finished this activity. To disengage Yard Moving, select the Yard Moving disengage option.

If the engine goes through a Power Off cycle while Yard Moving is activated, Descartes SmartFleet disengages Yard Moving.

Warnings

Warning messages will display to notify the driver of possible HOS rule violations such as:


- Daily driving time
- Daily on duty time
- Weekly on duty time
- 30-minute rest break

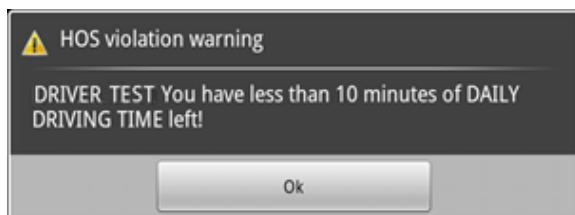

Once the driver enters the last hour of a certain available status, a warning will display. Rest Break warnings are described below.

Rest Breaks

After seven hours from going On Duty, if the driver is driving and has taken no breaks since going On Duty, the system will issue warnings (pop-up messages) to the driver. An audible alert is also emitted.

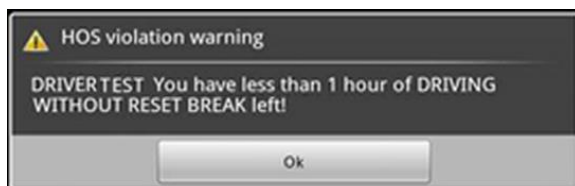

These warnings are received 60, 30, and 10 minutes before the actual violation occurs.

HOS Status - Driver Test			DESCARTES
DRIVING	Less than 1h to Rest Break	US 7 Day	
11 hour	14 hour	7 day	
0:37	7:00	34:45	
Log sync:	08/13/17 8:57AM	DRIVE time left:	6:59
Shipping doc.:		Consec. time off	0:00
Trailer ID:		Daily distance:	0.00mi
		Weekly distance:	500.00mi

 **Note**— Warnings are not displayed if you are in "On Duty" status.


HOS Status - Driver Test			DESCARTES
DRIVING	Take Rest Break	US 8 Day	
11 hour	14 hour	8 day	
5:36	7:50	7:50	
Log sync:	08/13/17 2:14PM	DRIVE time left:	5:23
Shipping doc.:		Consec. time off	0:00
Trailer ID:		Daily distance:	0.00mi
		Weekly distance:	0.00mi

If you do not take a break or start driving without having taken a break in the previous eight hours, the system displays a violation alert.



Power Warning

The system warns the driver if the battery level on the tablet device is becoming low.

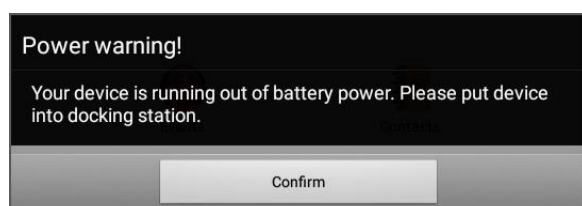


The driver should place the device in the docking station to re-charge the device. If the driver does not, the system will safely shutdown when the battery level is critically low.

Co-Drivers

Login

The co-driver must login *before* the vehicle is in motion. To add one or more co-driver(s):

- 1 Tap the **Co-Drivers** icon on the Descartes SmartFleet Main Menu

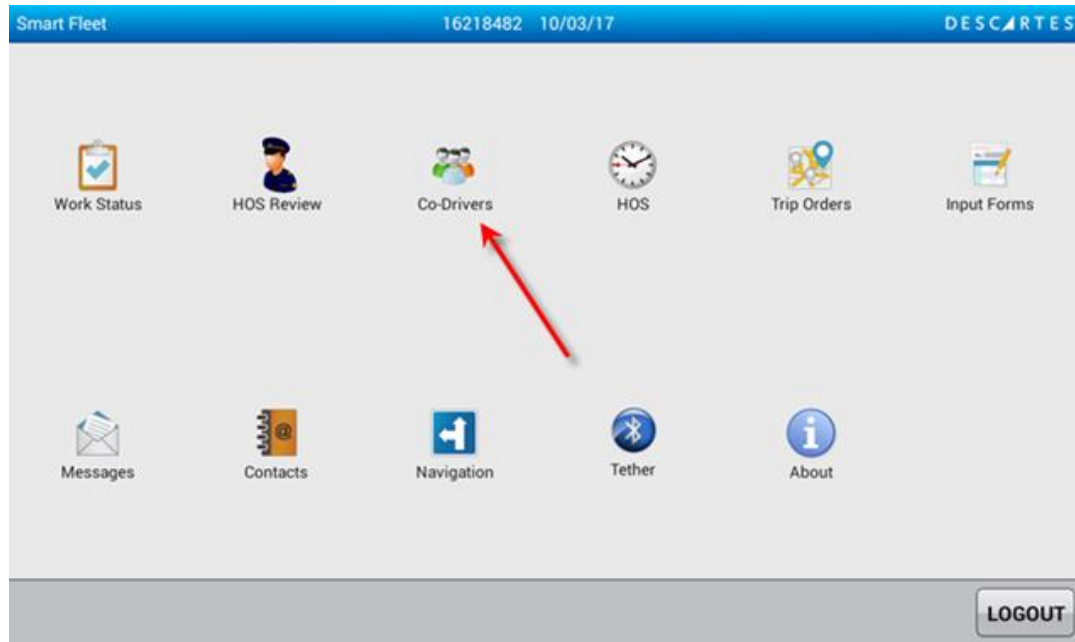

Or,

- Tap the **Co-Driver** button on the **Work Status** screen



Work Status 16218482 10/03/17 DESCARTES

Pre Trip
ON DUTY

ON Duty
ON DUTY

Driving
DRIVING

Rest Break
OFF DUTY

Post Trip
ON DUTY

OFF Duty
OFF DUTY

Driver Name: Driver Test Driver ID: 12345

Carrier name: Test Driving Company

Carrier DOT number: 987654321

Exempt from ELD: No

Vehicle ID: Test Truck

Current status: **ON Duty** 0h 0min

Logged in since: 10:36:52AM

BACK HOS TRIP ORDERS **CO-DRIVERS** SUMMARY ASSIGNMENTS

The **Co-Drivers** screen opens. If there are no Co-Drivers logged in then the **Co-Drivers** screen is empty.

2 Tap **Add**.

Co-Drivers 16218482 10/04/17 DESCARTES

empty list

BACK ADD

- 3 The co-driver can enter his or her PIN or reference number in the Login field and tap the **Login** button.

Co-Drivers 16218482 10/17/17 DESCARTES

Co-Driver Login

REF:

BACK LOGIN

Only co-drivers with a valid PIN or reference number can login; otherwise the following notification appears.

Co-Driver statuses 16218482 10/04/17 DESCARTES

Pre Trip

ON Duty

OFF Duty

Sleeper Berth

BACK

Login data validation Break

Provided codriver login credential '123456' is invalid! Codriver is logged out!

Ok

Upon successful login, the **Co-Drivers Status** screen is displayed.

Co-Driver statuses	16218482 10/04/17	DESCARTES
Pre Trip		
ON Duty		
Rest Break		
Post Trip		
OFF Duty		
Sleeper Berth		
<div>BACK</div>		

The solution will not allow a co-driver to login while vehicle is in motion. When the vehicle is in motion the screen is locked and does not permit user interaction.

Work Status

As a minimum, the following Work Status options are available to the co-driver:

- Off Duty
- Sleeper Berth
- On Duty Not Driving

The co-driver may also have the following statuses if configured:

- Yard Moving
- Personal Conveyance

The "Driving" status is not available to the co-driver at this point. The co-driver must swap with the Driver and become the Driver before "Driving" status is available. This is described in the [Swap Drivers](#) section.


To use the **Work Status** screen:

- 1 The co-driver taps the applicable status.
- 2 The co-driver's **Work Status** screen opens listing co-driver(s) with the current Duty Status.
- 3 Additional co-drivers can be added by selecting the **Add** button and repeating the steps listed in the previous section.

HOS

Co-drivers can review their HOS logs and make edits.

- 1 Select the **HOS** icon.
- 2 Select the applicable driver/co-driver name listed in Logged in Users (applies only if co-driver(s) are logged in). The selected driver's **HOS Status** screen appears.

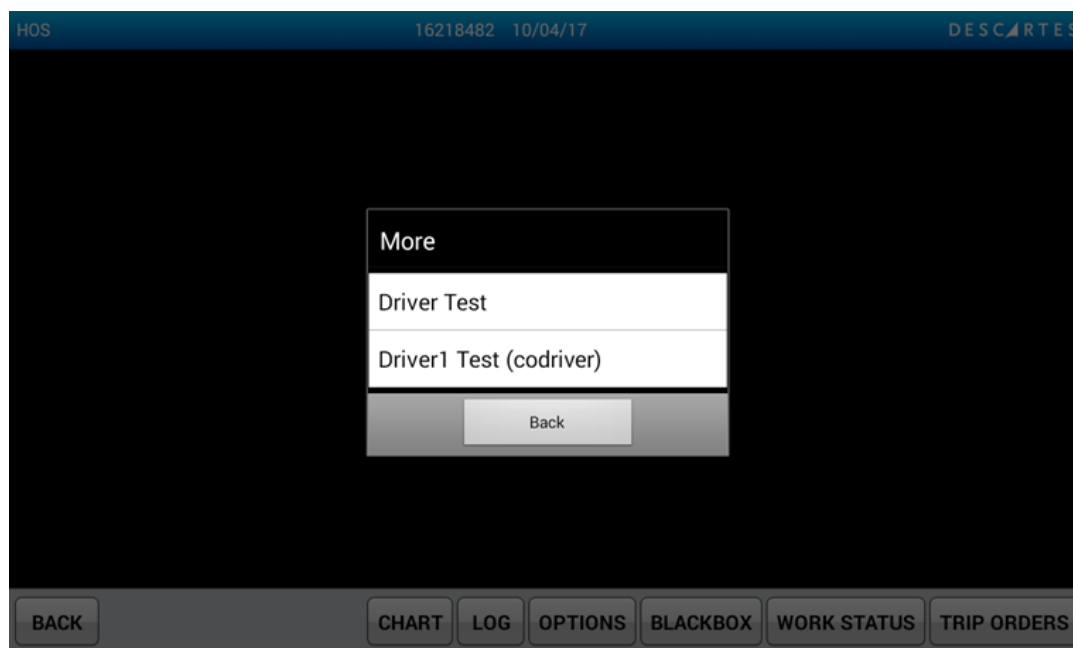

- 3 The co-driver can view and certify logs as described in the [Reviewing and Certifying Proposed HOS Logs](#) section.

If the vehicle is in motion, Descartes SmartFleet prevents the co-driver from viewing/editing/certifying his logs.

Swap Drivers

Drivers and co-drivers can switch role so that the Driver becomes the co-driver and vice versa. This swap is only permitted when the vehicle is not in motion.

- 1 To swap the driver tap on the co-driver's name in the **Work Status** menu

Work Status		16218482 10/04/17	DESCARTES
Pre Trip ON DUTY	Driver Name Driver Test Driver ID 12345		
ON Duty ON DUTY	Carrier name Test Driving Company		
Driving DRIVING	Carrier DOT number 987654321		
Rest Break OFF DUTY	Exempt from ELD No		
Post Trip ON DUTY	Vehicle ID Test Truck		
OFF Duty OFF DUTY	Current status: ON Duty 0h 27min		
	Logged in since 9:29:28AM		
	Co-Drivers Driver1 Test Sleeper Berth		
<div> <div>BACK</div> <div>HOS</div> <div>TRIP ORDERS</div> <div>CO-DRIVERS</div> <div>SUMMARY</div> <div>ASSIGNMENTS</div> </div>			

2 Tap on the Driver Swap

Work Status		16218482 10/04/17	DESCARTES
Pre Trip ON DUTY	Driver Name Driver Test Driver ID 12345		
ON Duty ON DUTY	Carrier name Test Driving Company		
Driving DRIVING	Carrier DOT number 987654321		
Rest Break OFF DUTY	Exempt from ELD No		
Post Trip ON DUTY	Vehicle ID Test Truck		
OFF Duty OFF DUTY	Current status: ON Duty 0h 35min		
	Logged in since 9:29:28AM		
	Co-Drivers Driver1 Test Sleeper Berth		
<div> <div>BACK</div> <div>HOS</div> <div>TRIP ORDERS</div> <div>CO-DRIVERS</div> <div>SUMMARY</div> <div>ASSIGNMENTS</div> </div>			

Go to

Info

Driver Swap

BACK

- 3 The co-driver now becomes the main driver and the previous main driver is now a co-driver

Work Status		16218482 10/04/17	DESCARTES
Pre Trip ON DUTY	Driver Name	Driver1 Test	Driver ID 66666
ON Duty ON DUTY	Carrier name	Test Driving Company	
Driving DRIVING	Carrier DOT number	987654321	
Rest Break OFF DUTY	Exempt from ELD	No	
Post Trip ON DUTY	Vehicle ID	Test Truck	
OFF Duty OFF DUTY	Current status:	Sleeper Berth	0h 0min
	Logged in since	10:09:26AM	
	Co-Drivers	Driver Test	ON Duty


BACK
HOS
TRIP ORDERS
CO-DRIVERS
SUMMARY
ASSIGNMENTS

After the swap, the Driving Duty Status will be available to the initial co-driver (now Driver) and no longer available to the initial Driver (now co-driver).

The ELD does not allow co-drivers to switch driving roles when the vehicle is in motion.

Unidentified Driver


Descartes SmartFleet detects the vehicle in motion. If the vehicle is in motion and a Driver has not logged in, Descartes SmartFleet informs the user of the following and an audible tone is emitted:

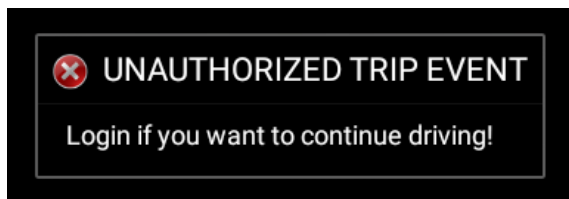

The driver must dismiss the dialog and login in.

If the Driver does not login, HOS Logs are recorded against an Unidentified Driver.

Unidentified Driver Logs can be proposed to a driver by a back-office staff and the driver has the option to Accept those HOS Logs or Refuse them.

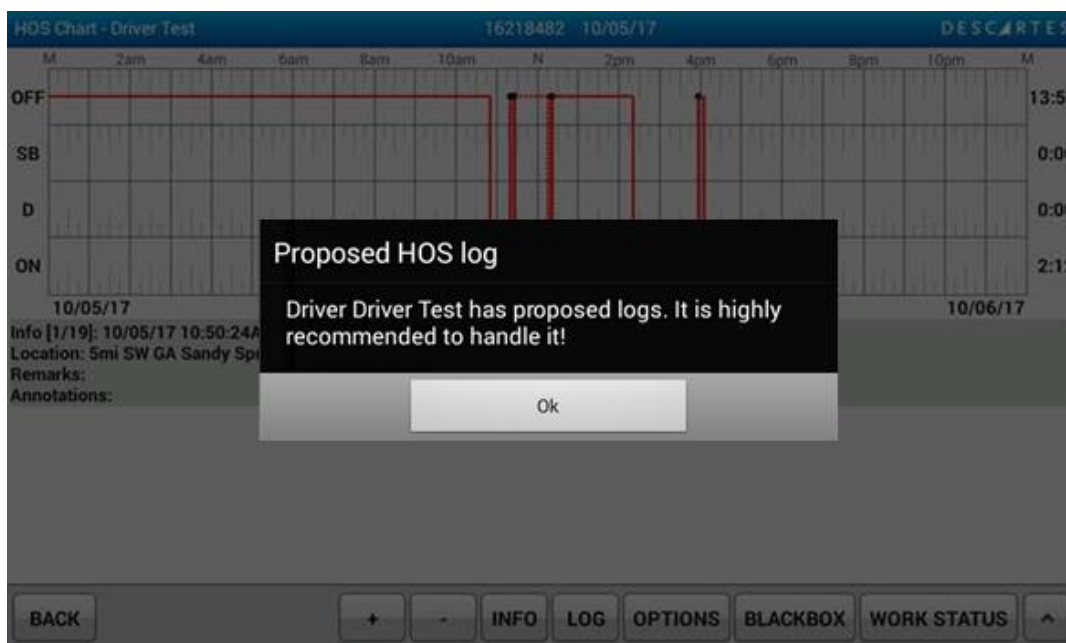

The Proposed Logs are automatically annotated to inform that they are **Proposed from Unidentified Driver**.


HOS record edit		16218482 10/05/17	DESCARTES
Vehicle ID	Demo Truck / Demo Truck		
	Original / (Proposed)		
Date	10/05/17 12:25:50PM / (10/05/17 12:25:49PM)		
Status	ON DUTY		
Location	7mi SW GA Mountain Park		
Remarks	/ (Proposed from Unidentified Driver)		
Rule	NO RULE / (US 7 Day)		
Shipping document			
Trailer ID			
<input type="button" value="BACK"/>		<input type="button" value="REFUSE"/> <input type="button" value="SAVE"/>	

If the HOS Logs are accepted, the driver will still need to review and certify his logs as described in the [Reviewing and Certifying Proposed HOS Logs](#) section.


Additionally, Unidentified Driver Logs can be viewed and claimed by the driver by selecting the **Unidentified Logs** icon on the Main Menu.

The **Unidentified Logs** view is presented.

The Unidentified Driver records are grouped by day and sorted in descending order.

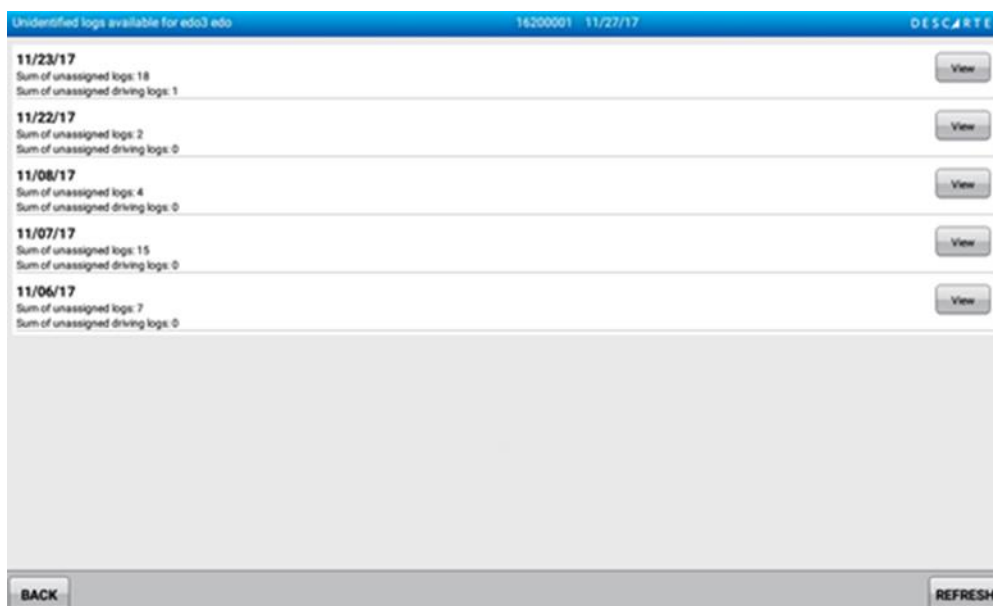

Selection of **View** presents the logs for that day and the driver can claim the individual records.

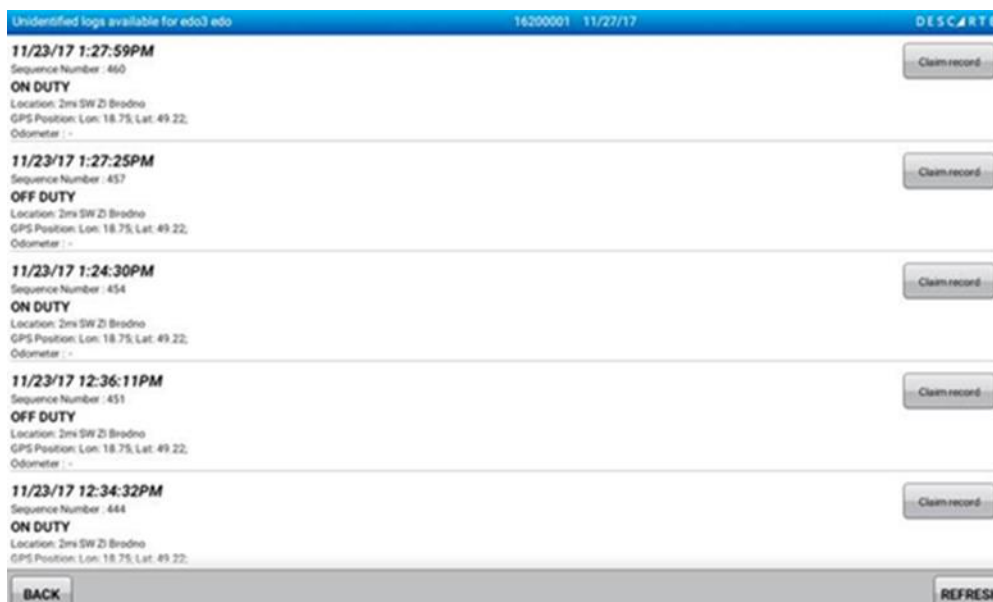

The driver can **Claim Record** for each log that he wishes to be associated to himself. When finished the driver selects the **Back** button to return to the main menu.

If the HOS Logs are claimed, the driver will still need to review and certify his logs as described in the *Reviewing and Certifying Proposed HOS Logs* section.

HOS Review

The **HOS Review** option allows an authorized safety official to review HOS reports and receive HOS reports via email for the selected driver or an unidentified driver for the current 24-hour period and/or any of the previous seven consecutive days, irrespective of the vehicle operated by the driver and without entering the commercial motor vehicle; the display may be untethered from its mount and passed outside of the vehicle for a reasonable distance.


Depending on tablet device and installation, the driver may also need to unplug the cable from the tablet device. During this process the driver will be asked to confirm that he really does wish to unplug the ELD from the engine. Following driver confirmation, the top line color in Descartes SmartFleet will be Red to indicate that the device is no longer connected to the vehicle.

HOS Status		12354 04/26/18		DESCARTES	
ON DUTY				US 7 Day	
11 hour		14 hour		7 day	
0:00		0:00		0:00	
Log sync:	04/26/18 11:00:44AM		DRIVE time left:	11:00	
Shipping doc.:			Time from last rest break:	0:00	
Trailer ID:			Consec. time off	0:00	
			Daily distance:	0.00 mi	
			Weekly distance:	0.00 mi	
BACK		CHART	LOG	OPTIONS	BLACKBOX
		WORK STATUS	TRIP ORDERS		


The display device should be handed to the Safety Official with the Cab Card that provides instructions on how the HOS reports can be viewed.

To use this functionality:


- 1 Select the **HOS Review** icon on the **Main Menu**.

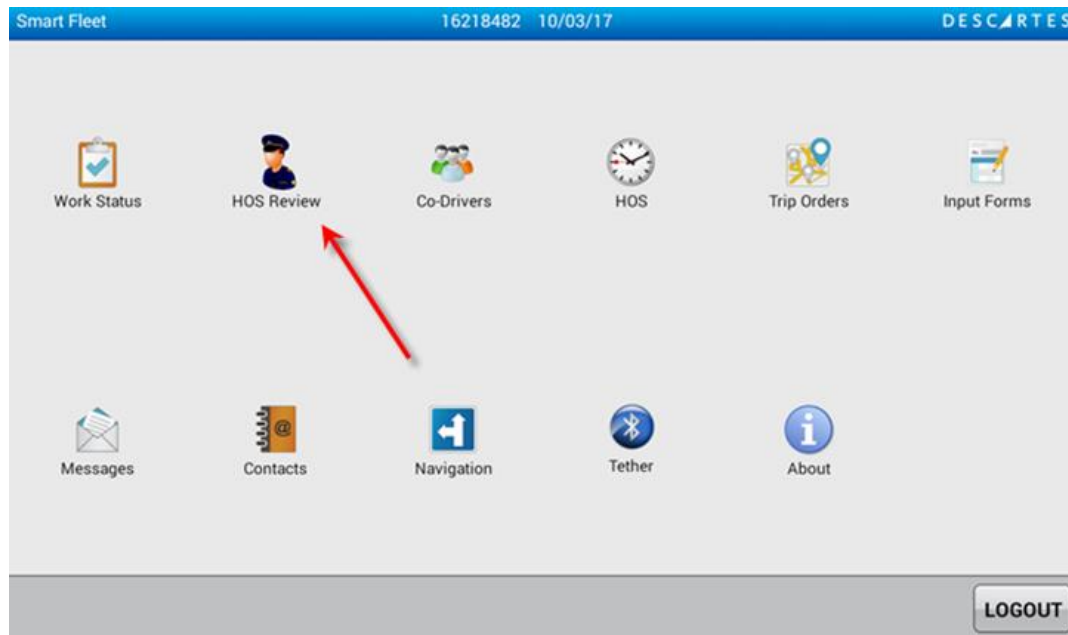

- 2 Select the driver reference number or the **Unidentified Driver** option.

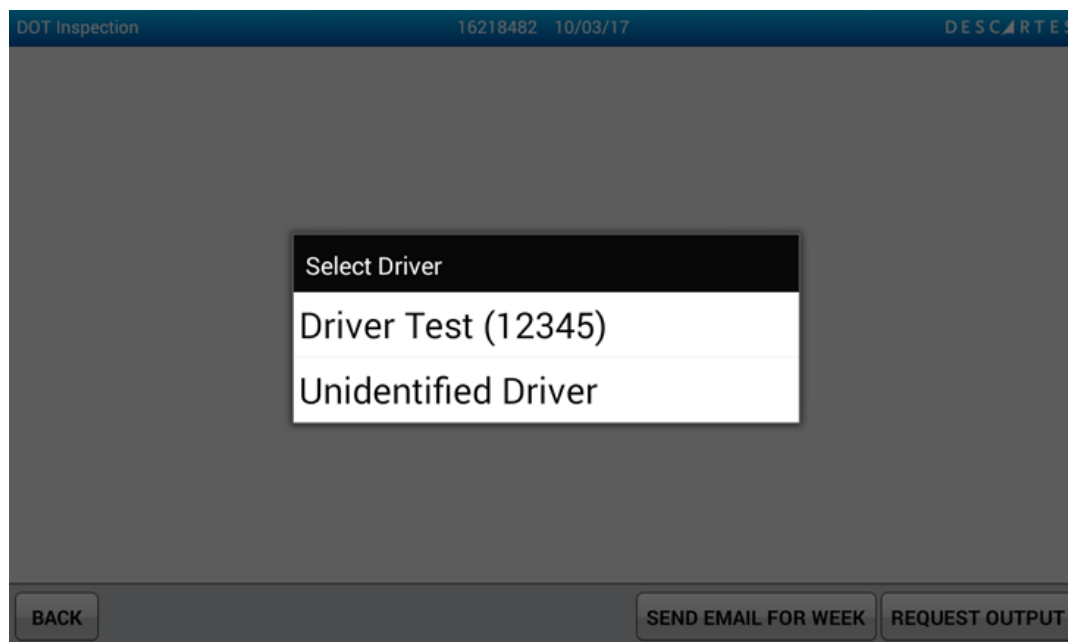


- 3 Select the date for records that you wish to view. The current 24-hour period can be selected (**Today**) or one of the previous seven days.

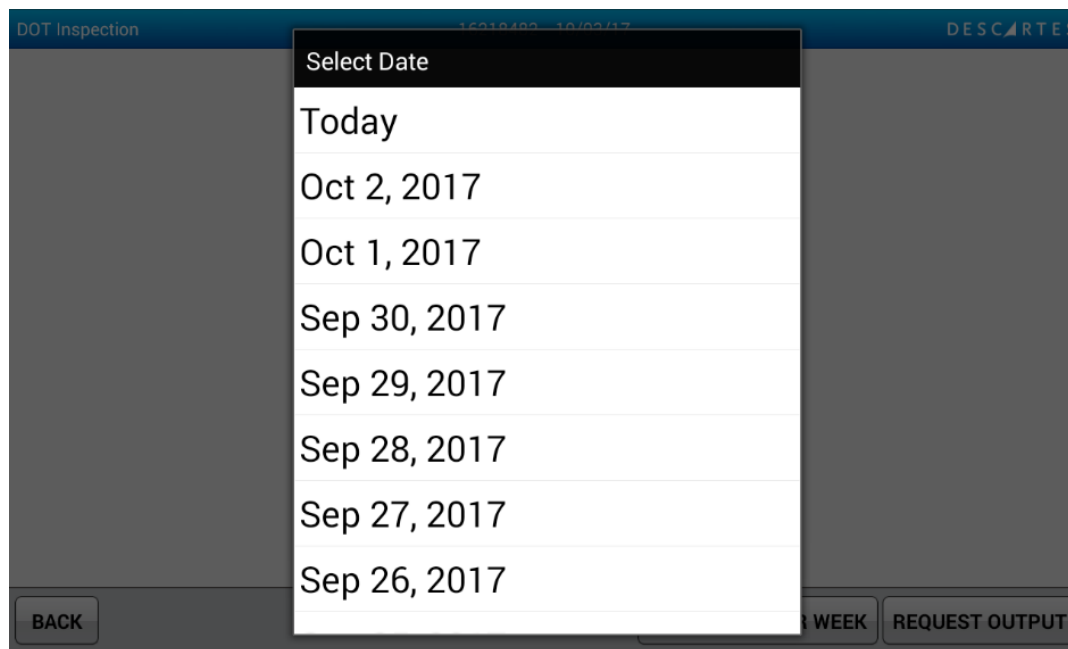

A header is displayed with the following information:


- Record Date
- Carrier DOT number
- Driver Name
- Driver License number
- License Issuing State
- Start and End Odometer
- Miles Today
- Start and End Engine Hours
- ELD Manufacturer
- Shipping Document Number
- Trailer Id
- Tractor VIN
- Carrier Name

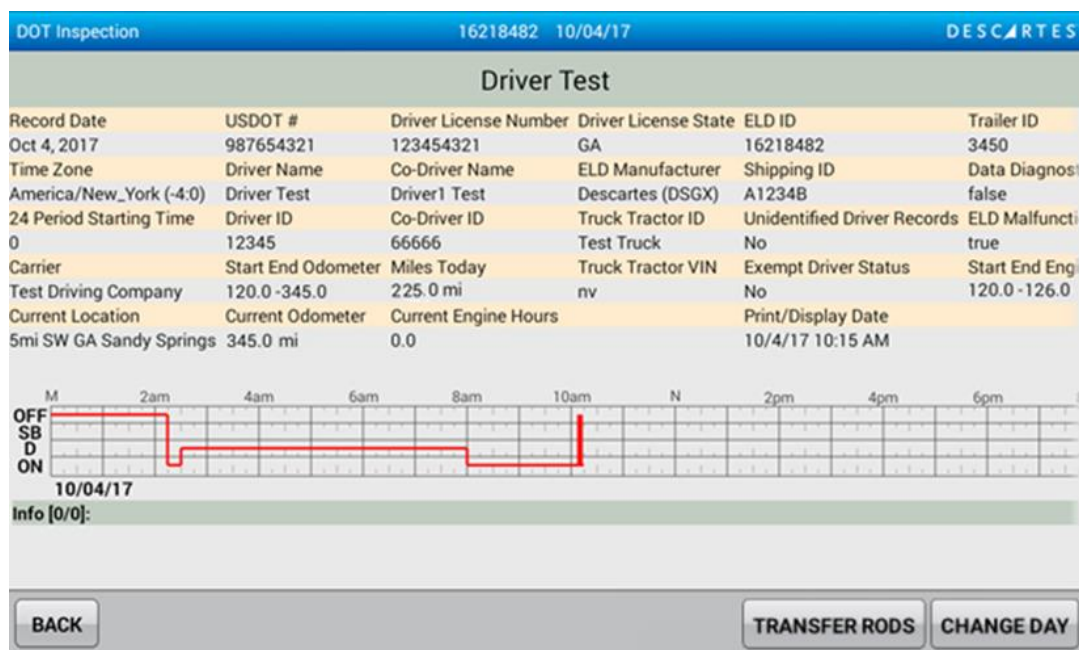

Depending on the size of the device's screen, the Safety Official may need to swipe left to view all this information.


Below the header, view the **HOS Graph**. The following is overlaid on the graph:

- **Total hours** - Total Hours in working day so far
- **Off duty** - Total Hours logged with "Off Duty" status
- **Sleeper Berth** - Total Hours logged with Sleeper berth status
- **Driving** - Total Hours logged with Driving status
- **On duty not driving** - Total Hours logged with On Duty not driving status
- **Miles Today** - Vehicle Miles Driven today

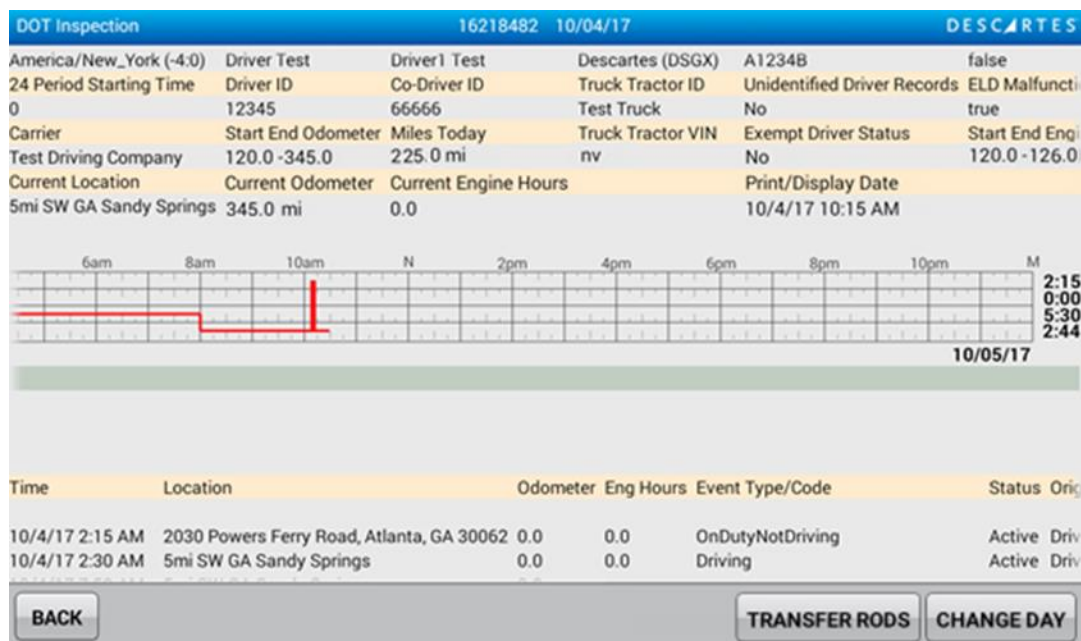

Swipe up to view the details of each HOS Record. The following is displayed for each record in driver's report:

- Vehicle
- Driver
- Time
- Location
- Odometer
- Engine Hours
- Event Type
- Status
- Origin
- Remark/Annotation

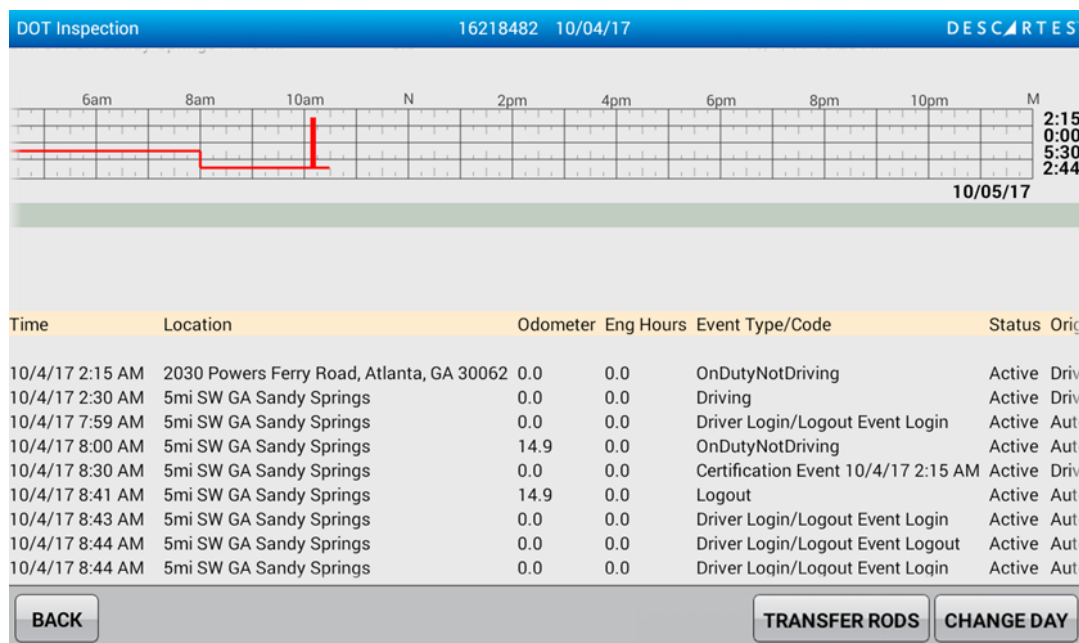

Depending on the size of the device's screen, the Safety Official may need to swipe left/swipe right to view all this information.

Transfer of ELD Records

The Safety Official can transfer the records via email or Web Service to the FMCSA.

To transfer the records:

- 1 Select the **Transfer RODS** button.
- 2 The Safety Official is prompted to select the method of transfer and enter an optional comment:

Set Method and Comment


Select method: ☒ Webservice ☐ E-mail

Comment:


Ok Cancel

The comment entered will be included with transferred HOS Logs when they are transferred.

- 3 The Safety Official is prompted to confirm the transfer:

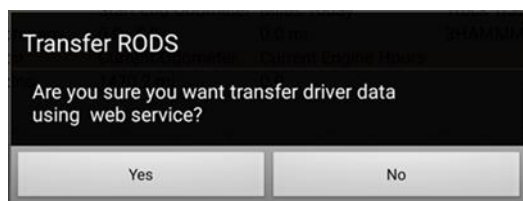

- 4 If there is no internet connection then the following message is displayed:

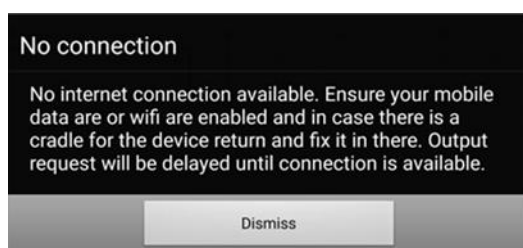


The data transfer request is stored in the system and will be sent when an internet connection is available.


- ➡ **Note**— For the tablet device the Officer must hand the terminal to driver. Driver must place the terminal back in the docking station and wait for a successful internet connection.

ELD Diagnostic

Descartes SmartFleet continuously monitors data using a set of parameters defined by the FMCSA and alerts users of ELD Diagnostic events as they occur. An orange square icon is displayed in the notifications bar of the mobile device to indicate an ELD Diagnostic Event.

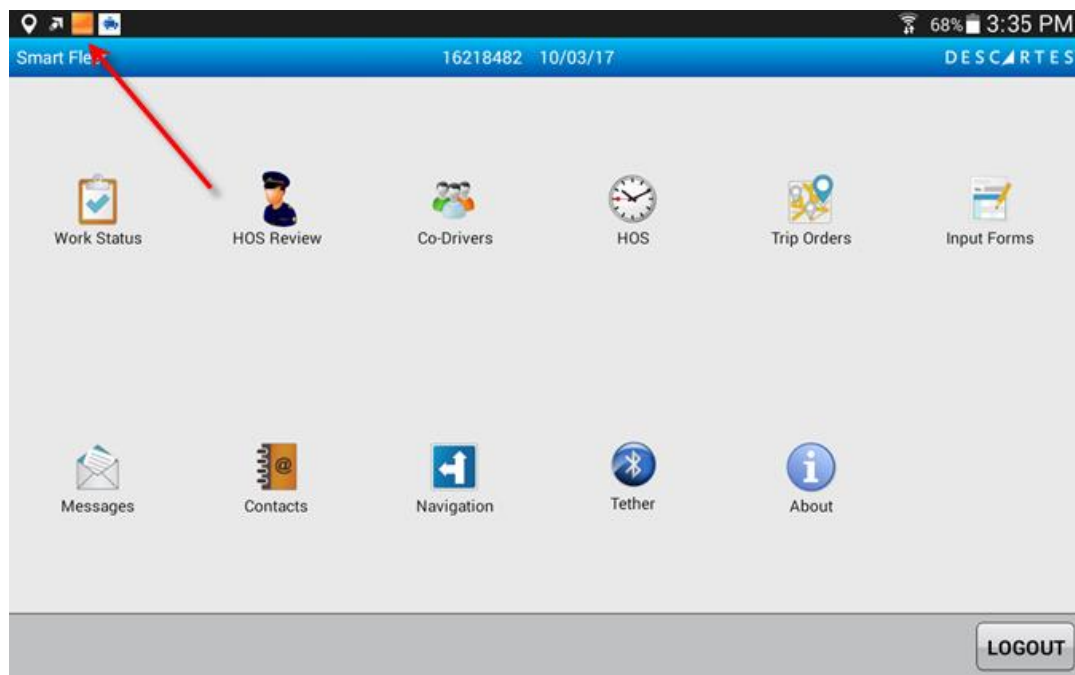


Swipe down from the notifications bar to view additional information regarding the Diagnostic Event.

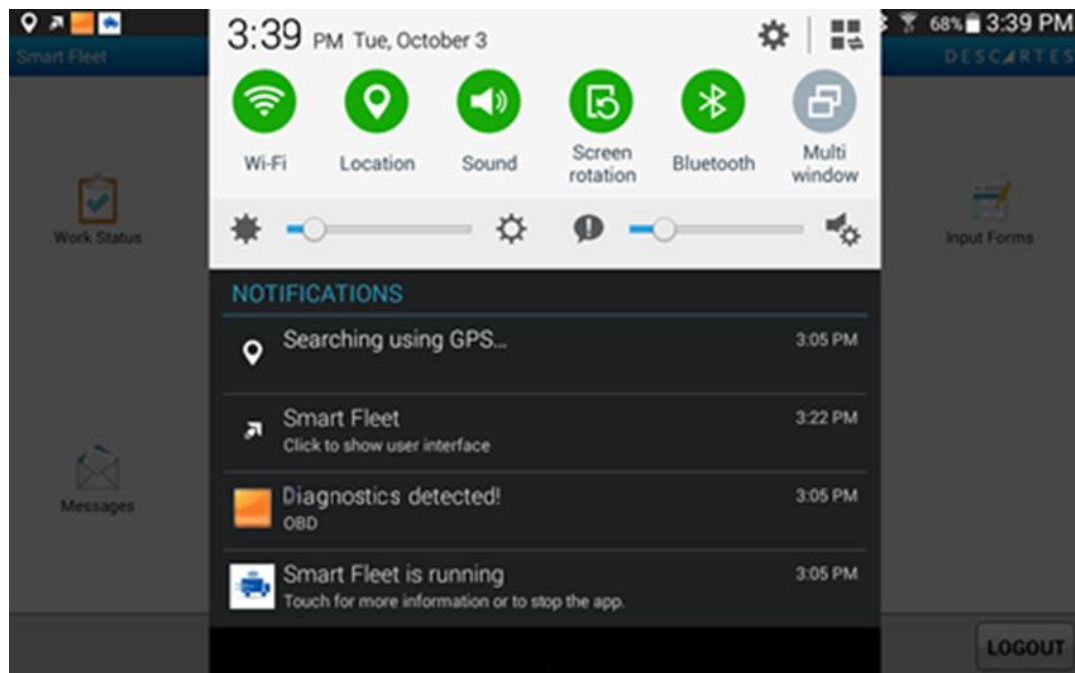


Your back-office will also be alerted of this Diagnostic Event and will contact you to help resolve the issue.

ELD Malfunction

Descartes SmartFleet monitoring may detect an ELD malfunction. Users are informed when an ELD malfunction occurs. A red square icon is displayed in the notifications bar of the mobile device to indicate an ELD malfunction.

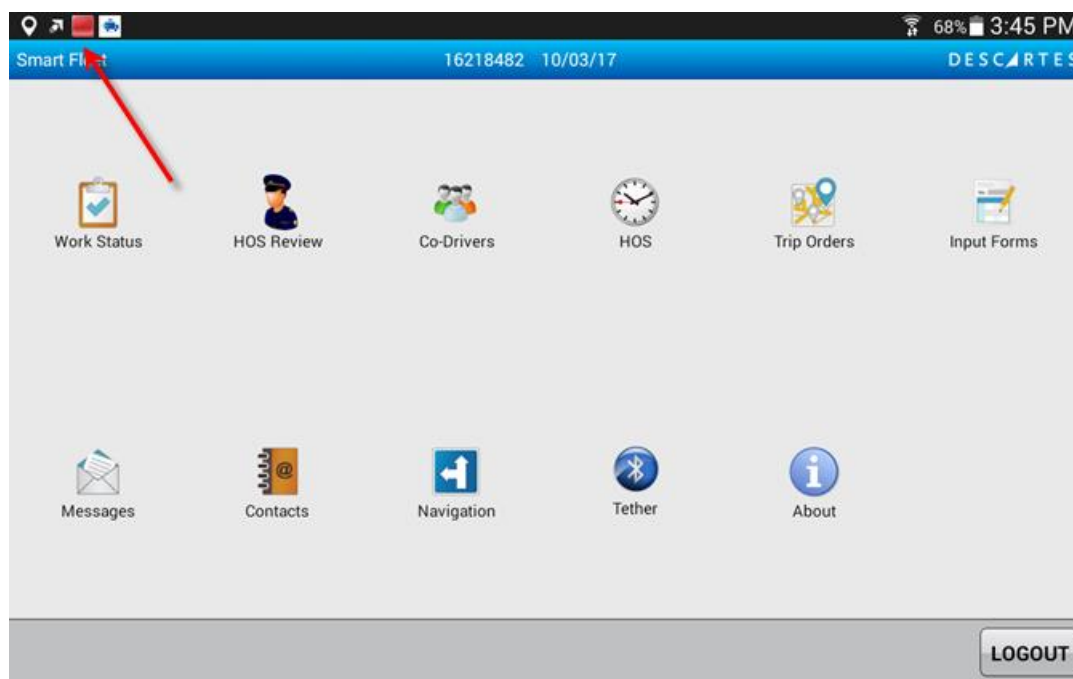

Swipe down from the notifications bar to view additional information regarding the ELD malfunction.

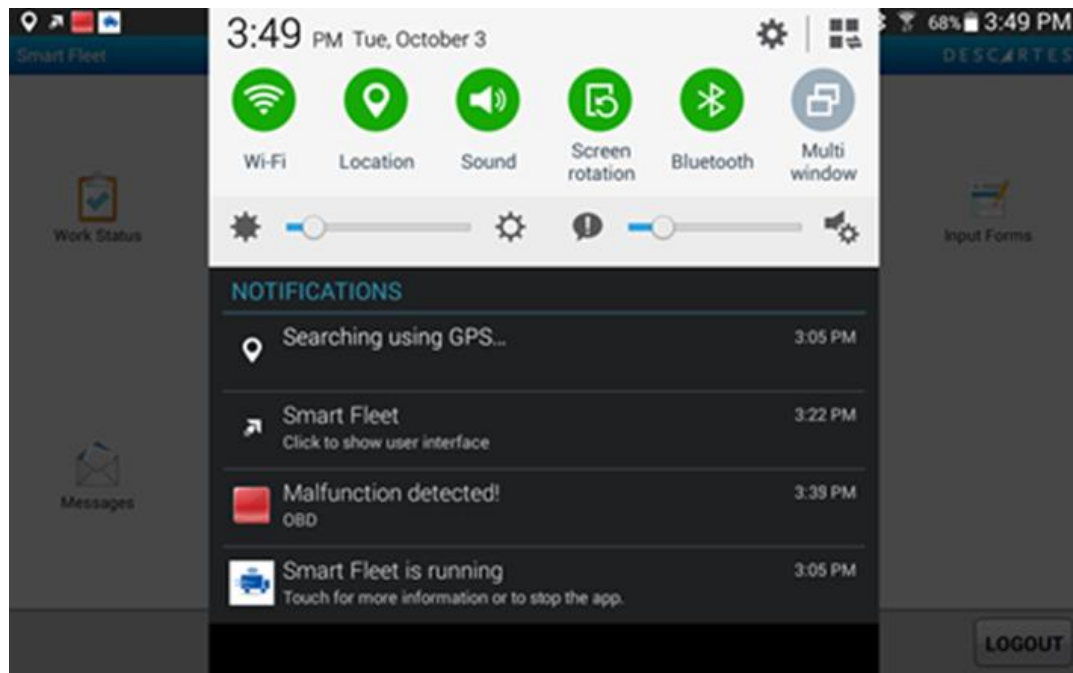


Your back-office will also be alerted of this Malfunction event and will contact you to help resolve the issue.

Log-Out


At the end of your Duty Period you must log out of Descartes SmartFleet.

To log out:


- 1 Tap the **Logout** button from the main Descartes SmartFleet menu.

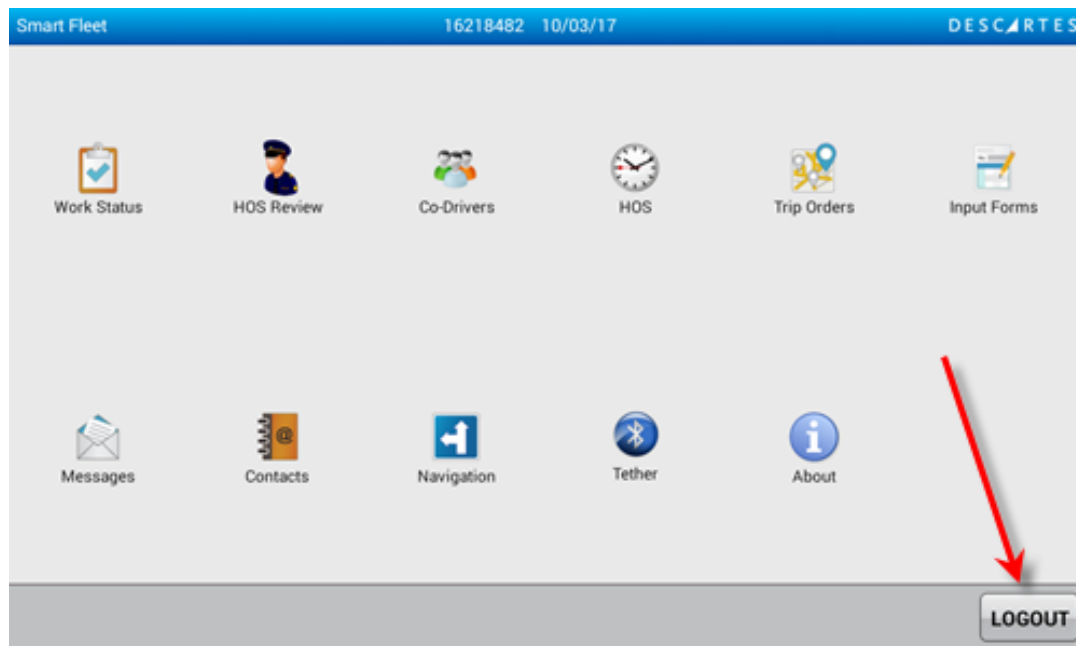

- 2 HOS Logs should be certified before you log out. If you attempt to log out with uncertified logs, the system will prompt you to certify your logs. This process is described in the *Reviewing and Certifying Proposed HOS Logs* section of this document.

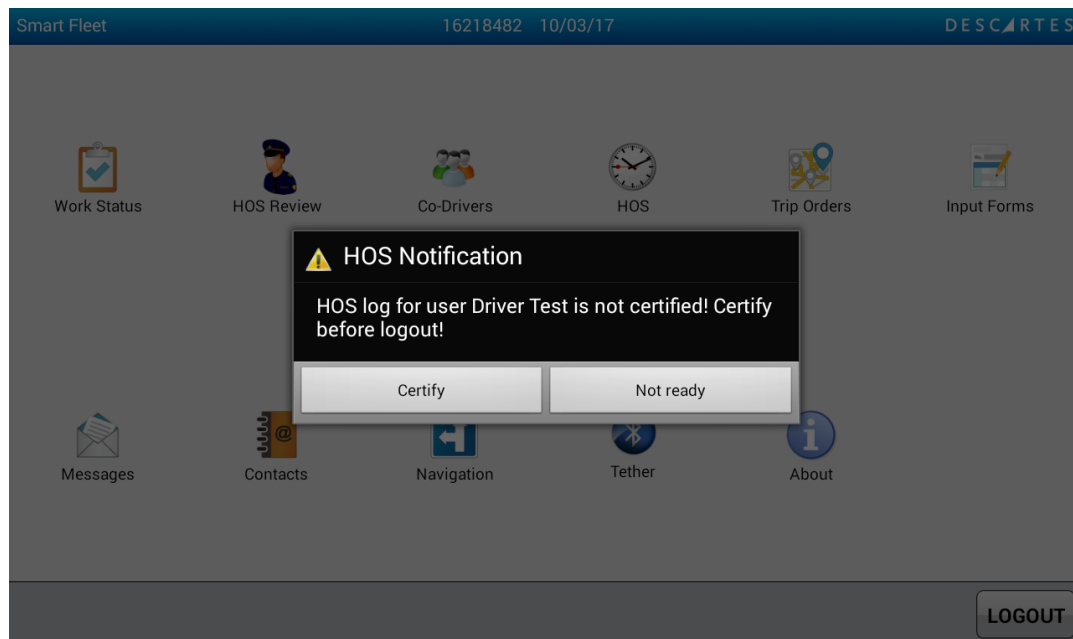

- 3** Once all logs have been certified, the Logout process continues and the system will prompt you to confirm your Duty Status.

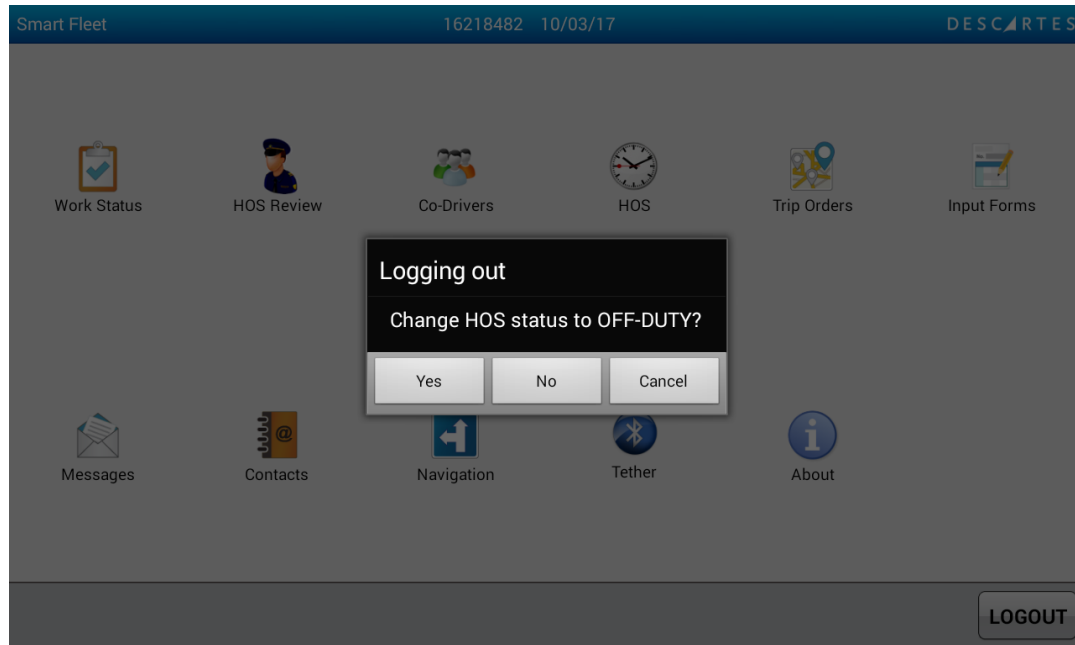

If you are going off duty then you should indicate "Off Duty" status.

- 4** If co-drivers are logged in, a notification will appear and the co-driver is guided through the log certification and log-out process.